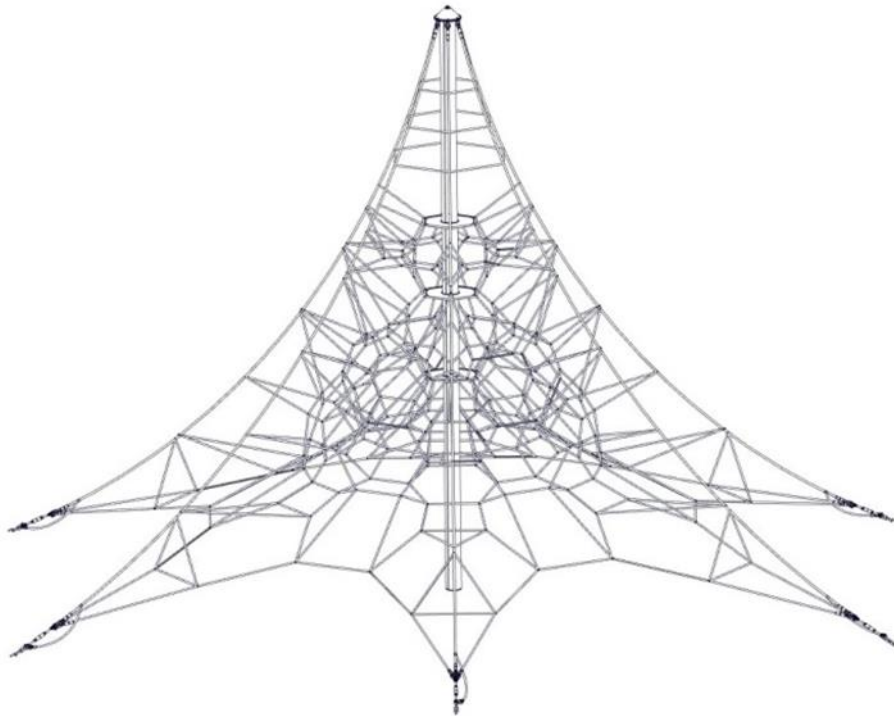


---

## **A Assembly Instruction** **Spider, Art. No. 5000-8-6 (Height 8,30m)**

**Attention, Only use the instructions included in the scope of delivery for the assembly, installation and maintenance of the respective equipment!**



**Operator:** \_\_\_\_\_

**Location:** \_\_\_\_\_

**Revision history**

Revision 0 – 2013-11-27

The first allowed Version FH

Assembly Instructions

Revision 12 – 2021-09-08 FH  
neue Form der Anleitung

Stückliste überarbeitet

All rights reserved

© Copyright 2013 Huck Seiltechnik GmbH

## Contents

<b>A</b>	<b>Assembly Instruction Spider, Art. No. 5000-8-6 (Height 8,30m)</b> .....	<b>1</b>
1	Introduction Assembling .....	4
2	Data sheet Spider, Art. 5000-8-6 .....	6
3	Delivery contents (parts list with part numbers) .....	8
4	Required Spaces - Top view .....	13
<b>B</b>	<b>Maintenance Instruction, Spider, Art.No. 5000-8-6</b> .....	<b>25</b>
5	Introduction Maintenance .....	26
6	General maintenance information.....	27
7	Maintenance timetable .....	29
8	Regular maintenance.....	30
9	Monthly maintenance .....	31
10	Quarterly maintenance .....	31
11	Half yearly maintenance.....	31
12	Annual maintenance.....	32
13	Maintenance printout.....	34
14	Hand over document .....	36

## List of Tables

Table 3-1: Delivery contents, in words .....	8
Table 3-2: Delivery contents, in symbols.....	9

## 1 Introduction Assembling

### 1.1 General information

This equipment should be installed, inspected, maintained and operated in accordance with EN1176-7 guidelines.

**Before installation work commences, please check that you have all of the equipment and fixation components in the parts list provided (see Tables 3-1 and 3-2).**

**Please consider that the installation has to be carried out only on even terrain (max.slope up to 3%).**

Any spare parts that may be required can be obtained directly from your supplier.

Please do not hesitate to call your supplier if you have any problems during installation or in case of any other questions.



**Attention**

Following installation, complete assembly instructions, maintenance instructions and a maintenance record must be sent to the operator who must confirm receipt in writing. See the last page of this document.



**Attention**

All nuts and bolts are hot-dip galvanised or stainless steel.

One of the characteristics of stainless steel is that uncontrolled cold welding may occur when the nuts are tightened. To prevent this, it is necessary to spray the nuts and bolts with Teflon spray or another similar lubricant.

---

**We hereby confirm that this play equipment has been tested and certified in accordance with the play equipment standard EN 1176.**

## **Drawings / Views**

All optical drawings are showing only the measurements/dimensions and are no mandatory technical views of the complete item.

We reserve the right to change technical details of our articles which are serving for the further development of our articles and are reasonable for the customer.

## **Measurement tolerances**

Because of the properties and characteristics of the components, minor measurement tolerances compared to the indication on the sketches are possible.

This concerns all shown measurements except the foundation measurements resp. measurements below upper edge ground level/play area.

## 2 Data sheet Spider, Art. 5000-8-6

- Component zone: 12,10 m x 13,95 m (GE)  
Safety zone: 11,93 m x 12,50 m (PSN)  
Installation zone: 17,05 m x 15,61 m (MO)  
Fall height 1,80m  
Total ground height 8,15 m  
Fall protection area: 118,6 m<sup>2</sup>

- Required safety surface:

Surface material	Description mm	Minimum thickness of layer mm	Maximum height of fall mm
Topsoil grass			<= 1000*
<b>Chipped bark</b>	<b>20 – 80 grain size</b>	<b>300/400</b>	<b>&lt;= 2000/3000</b>
<b>Wood chippings</b>	<b>5 – 30 grain size</b>	<b>300/400</b>	<b>&lt;= 2000/3000</b>
<b>Sand</b>	<b>0.2 – 2 grain size</b>	<b>300/400</b>	<b>&lt;= 2000/3000</b>
<b>Gravel</b>	<b>2 – 8 grain size</b>	<b>300/400</b>	<b>&lt;= 2000/3000</b>
<b>Other ground materials</b>	<b>As recommended by manufacturer</b>		

- Name and overall dimension of the largest component:  
1x Steel post length 8,88m, ø 193,7 mm
- Name and weight of the heaviest component:  
1x Steel post (8,88 m), approx. 259 kg
- Intended age group: 6 years and over
- Please note that this equipment is set in concrete.**  
Concrete: C25/30  
Required concrete: 12,7 m<sup>3</sup>  
Foundations/area to be excavated (All foundations must be brought to equal level!):  
**6 x 1,70 m long x 1.70 m wide, total depth 1.20 m including 10 cm drainage**  
**1 x 1.30 m long x 1,30 m wide, total depth 1.10 m including 10 cm drainage**



Attention!

**Round off foundation edges (min.R = 100 mm)! Sizes of foundations are “4-5” (natural ground).**

**Soil class 4: soft to medium plasticity, interleave bound, with minor portion of stone (portion < 30% with bigger diameter of 63 mm grain size).**

**Soil class 5: ground with soil class 3 and 4 with big portion of stones (portion > 30% with bigger diameter of 63 mm grain size).**

**In case of sandy and soft soils, the surface measure of foundations have to be enlarged for about 50%!**

7. Assembly time, once foundations completed: 3 hours.  
Required assistants: 3 persons.
8. Any spare parts which may be required can be obtained directly from your supplier.
9. **We hereby confirm that this item of play equipment has been tested and certified in accordance with the play equipment standard EN 1176.**

### 3 Delivery contents (parts list with part numbers)

#### 3.1 In words


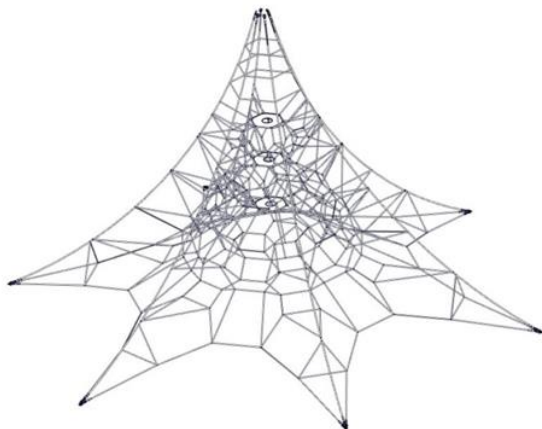


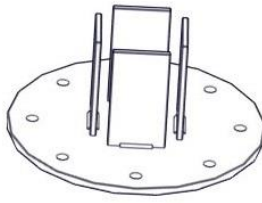


Table 3-1: Delivery contents, in words











Pos.	Quantity	Element / Description	Size	O.K.	Missing
1	1	steel post	Ø193,7 mm x 6,3 mm x 8.88 m		
2	1	Spider Net component	/		
3	3	membrane (preassembled on Pos.2)	/		
4	1	Mast cap	Ø360 mm		
6	1	Net Plate-Post Connector (preassembled on Pos.2)	Ø360 mm		
7	1	Threaded bolt, Nut, Nylock nut, Washer	M16 x 165 mm		
8	6	Turnbuckles	M20 Stainless		
9	6	Anker chains	Ø13 mm x 1,10 m		
10	12	Shackles	M12		
11	6	Foundation ankers	Galvanized Ø 20 mm		
12	1	Steel Base Plate	500mm x 500mm		
13	1	Lifting Rope	/		
14	1	Assembly Ring (must be removed after Installation is complete)	M16		
15	1	Loctite	/		
17	96	Foundation Steel (provided by Customer)	1,60 m lang, Ø 12 mm		
19	48	Foundation Steel (provided by Customer)	0,65 m lang, Ø 12 mm		
20	1	Middle Foundation Pipe (provided by Customer)	Ø300 mm x 650 mm		

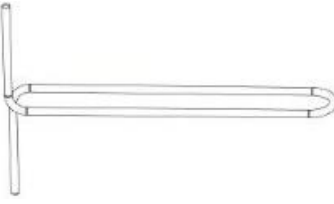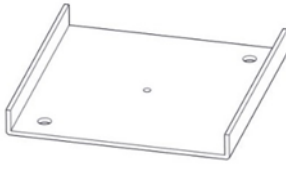


### 3.2 In symbols

Table 3-2: Delivery contents, in symbols


Pos.	Quantity	Symbol
1	1	 post Ø193,7 mm x 6,3 mm x 8.88 m
2	1	
3	3	
4	1	 Ø 360
6	1	 Ø 360
7	1	 M16 x 165 mm
8	6	 M20

Pos.	Quantity	Symbol
9	6	 13er 1,10 m long
10	12	 M12
11	6	 750 mm long
12	1	 500 x 500
13	1	
14	1	
15	1	
17	96	 1,60 m lang, Ø 12 mm <b>(provided by Customer)</b>
19	48	 0,65 m lang, Ø 12 mm <b>(provided by Customer)</b>
20	1	 Ø300 mm x 650 mm <b>(provided by Customer)</b>

	<b>Abbreviations for Spider</b>
<b>BWk</b>	Foundation Steel Reinforcement
<b>AB</b>	The legally prescribed setting times must be observed!
<b>D</b>	Concrete C25/30 (for foundations) 12,7 m <sup>3</sup>
<b>de</b>	removal
<b>EFB</b>	concrete reinforcement (6x)
<b>FGS</b>	Fix arresting cables with shackle (pos. 10) at the foundation anchor bars.
<b>G</b>	Drainage layer
<b>GE</b>	devices space
<b>KNR</b>	Middle foundation pipe
<b>F</b>	Fall protection
<b>O.K</b>	Upper edge of playing level
<b>O.K.-F.</b>	Upper edge of concrete
<b>PS</b>	Safety area
<b>PSN</b>	legal minimum space (safety area)
<b>PSE</b>	Recommended minimum room (Huck Seiltechnik)
<b>LRB</b>	Fill with Concrete after installation is complete
<b>M.Lot!!</b>	Set up the steel posts plumb
<b>VO</b>	Preassembled
 Attention!	<p><b>Round off foundation edges (min.R = 100 mm)! Sizes of foundations are designed for soils class “4-5” (natural ground).</b></p> <p><b>Soil class 4: soft to medium plasticity, interleave bound, with minor portion of stone (portion &lt; 30% with bigger diameter of 63 mm grain size).</b></p> <p><b>Soil class 5 : ground with soil class 3 and 4 with big portion of stones (portion &gt; 30% with bigger diameter of 63 mm grain size).</b></p> <p><b>In case of sandy and soft soils, the surface measure of foundations have to be enlarged for about 50%!</b></p>


See drawings for details of shortcuts!

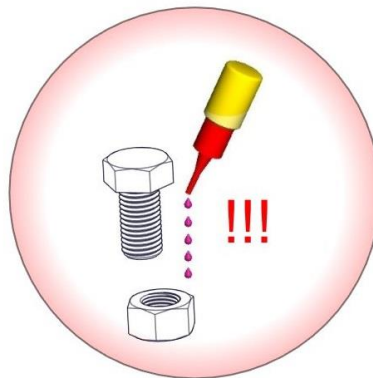
## Loctite-Thread locking adhesive!




Glue all screws, nuts and sleeves with loctite.  
(not less than 5 drops!)  
(except for Nylock nuts)

## 4 Required Spaces - Top view

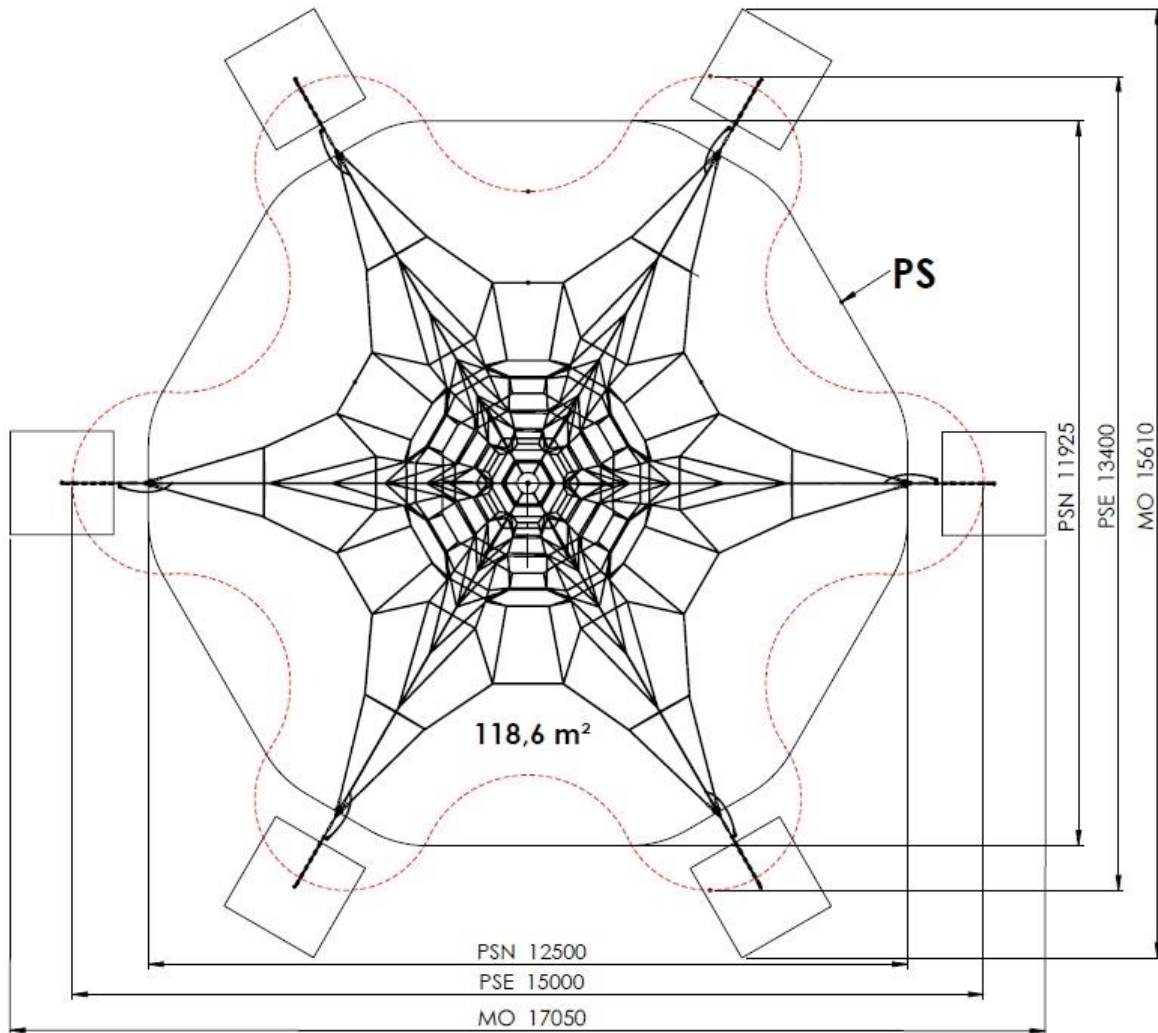


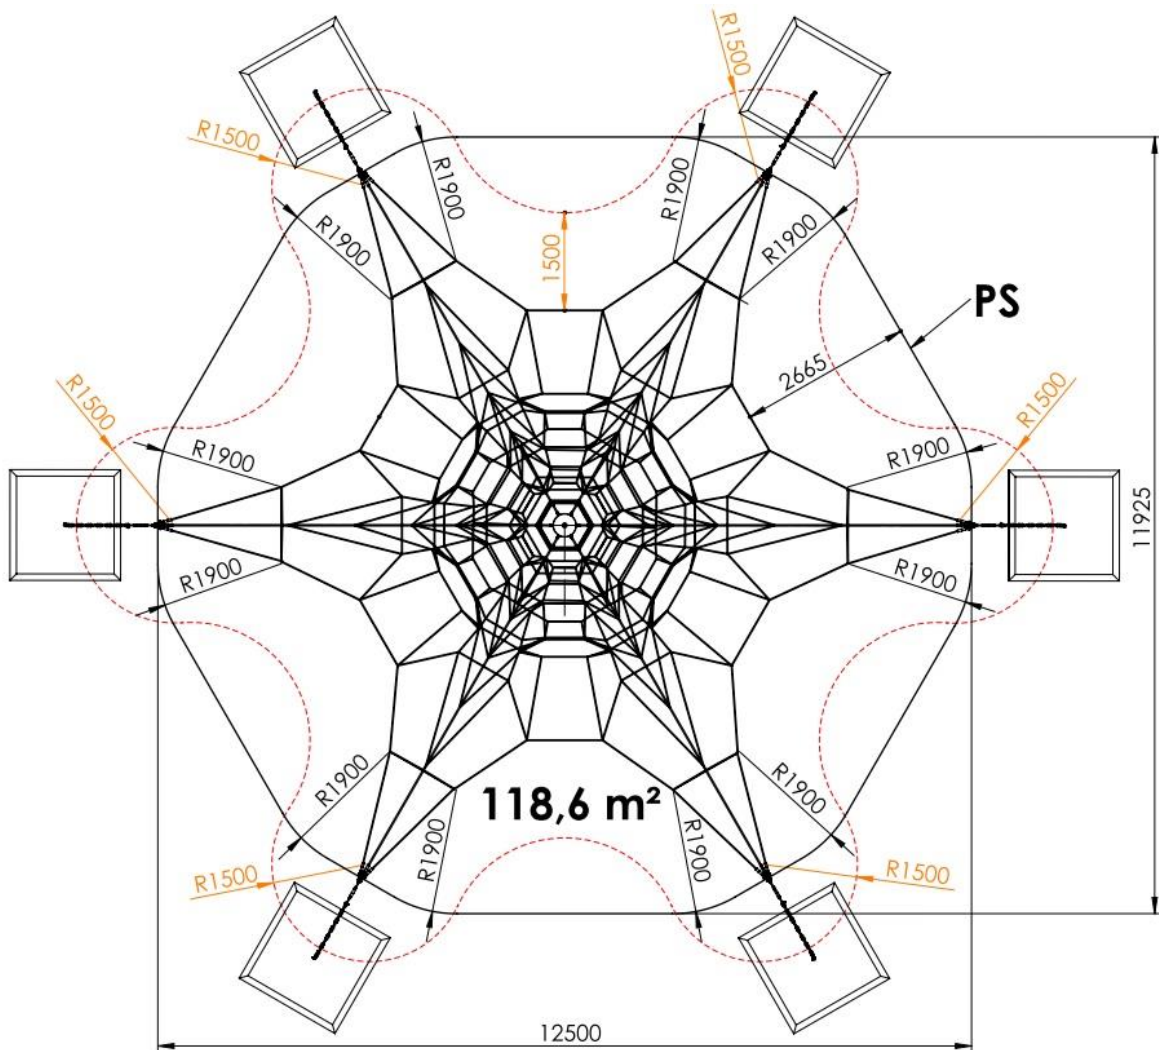





## Foundation plan - Side view

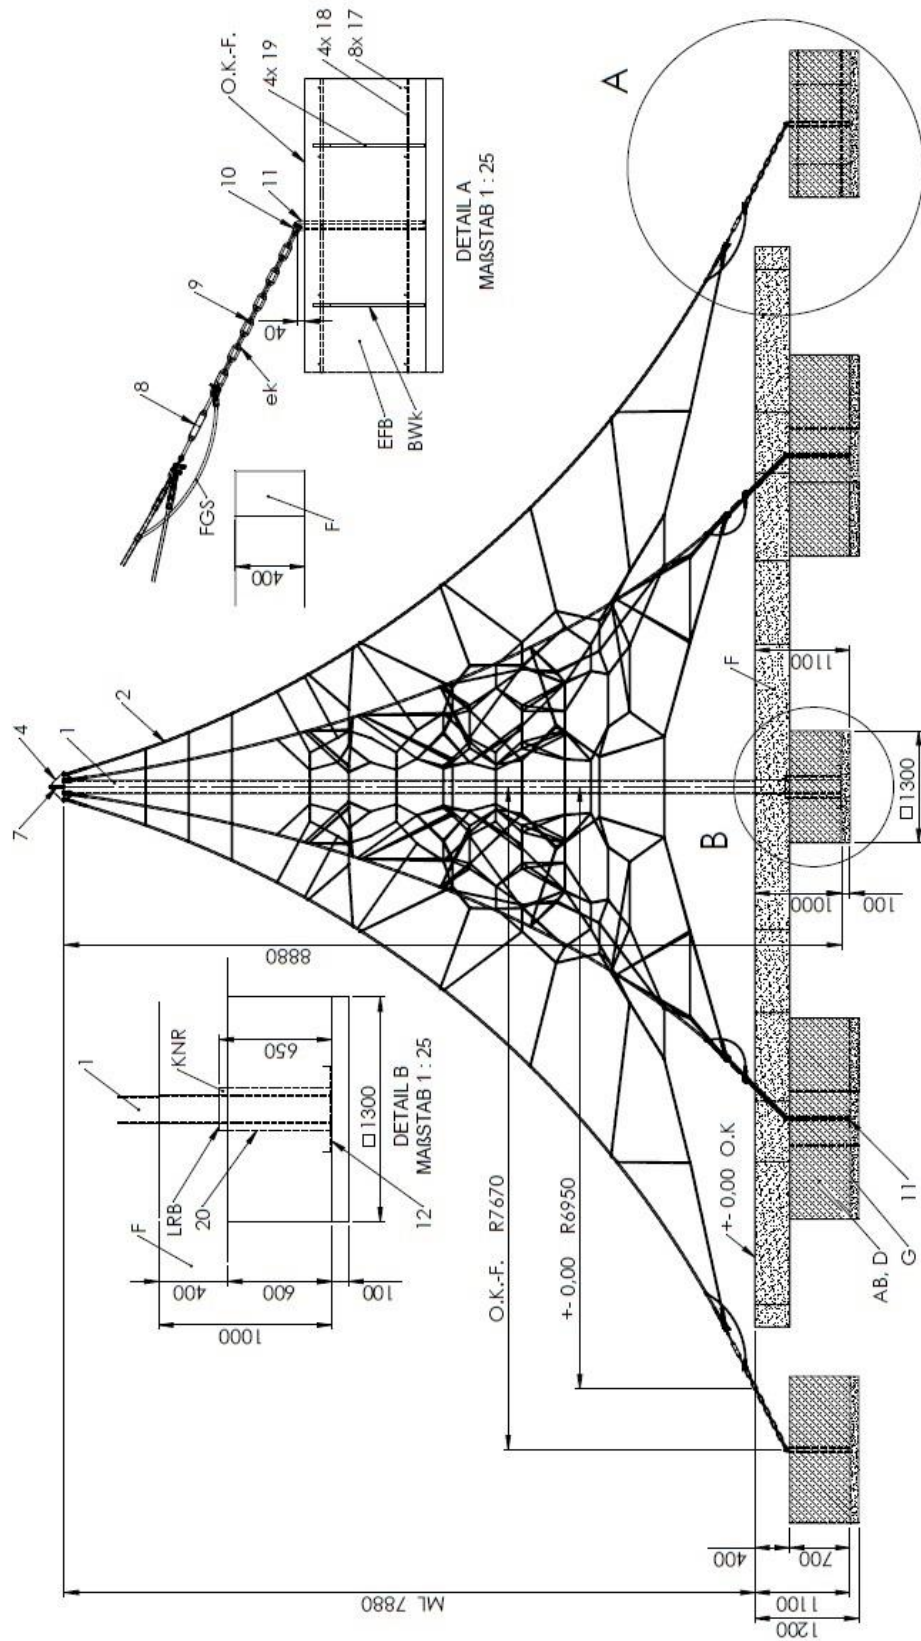


## Foundation plan - Top view

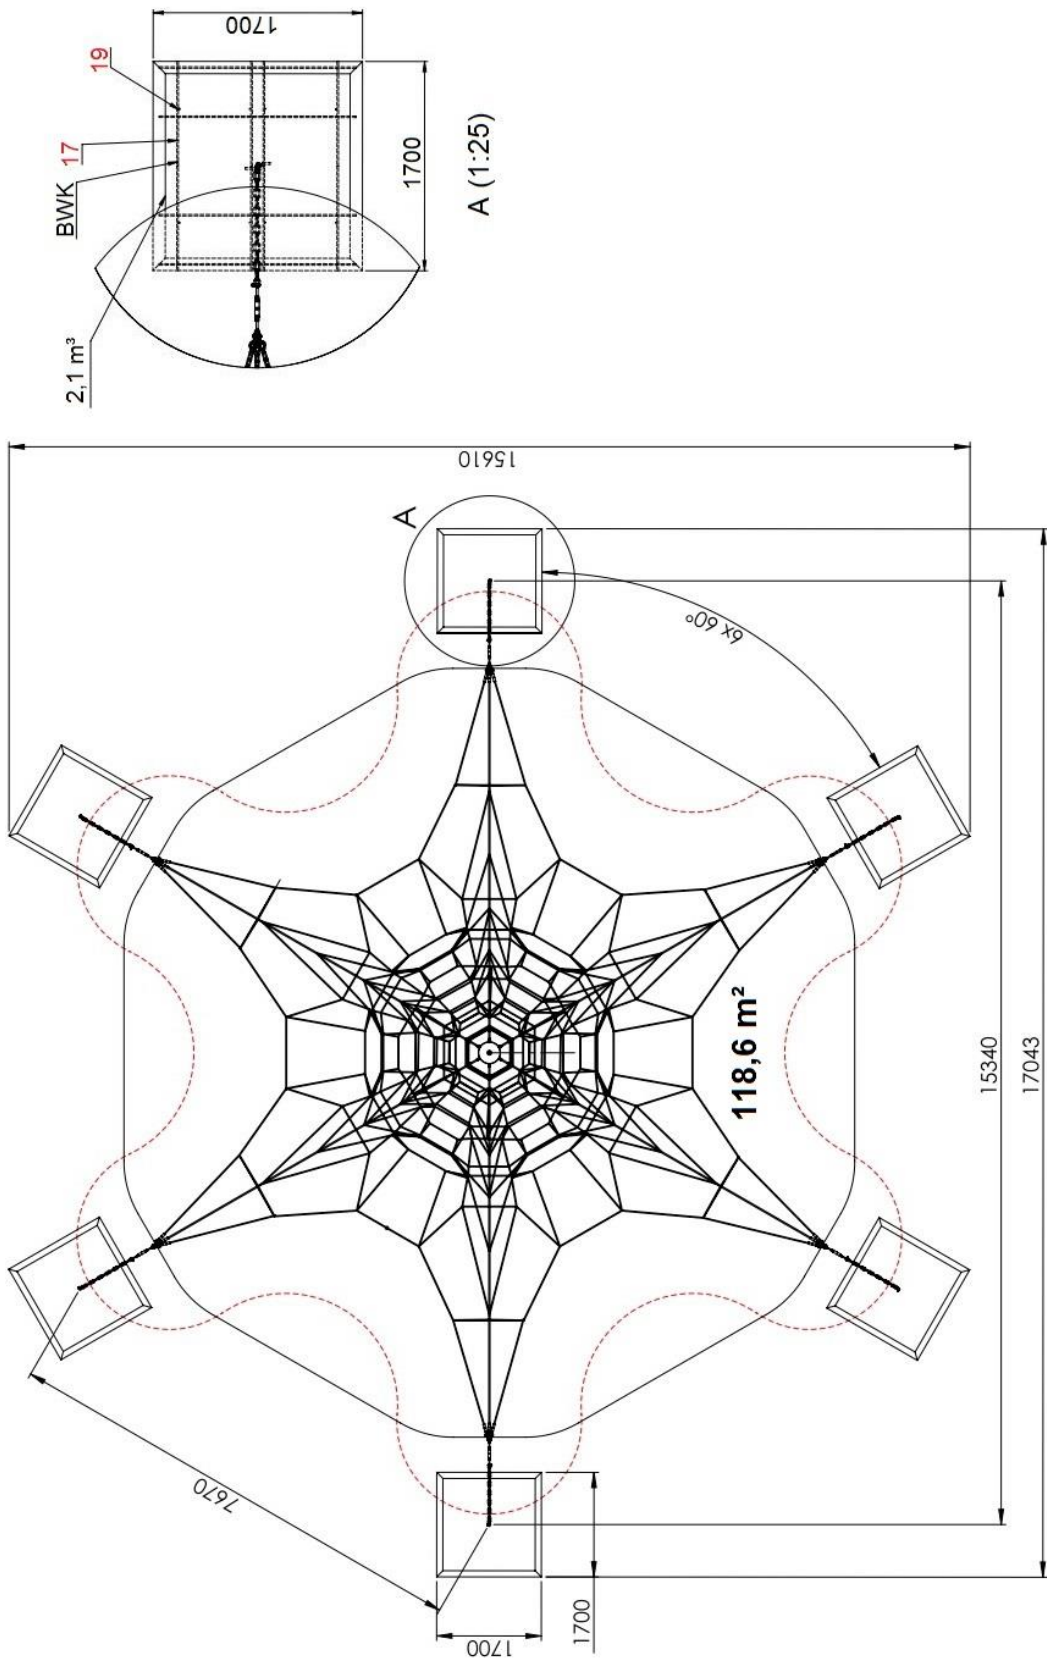




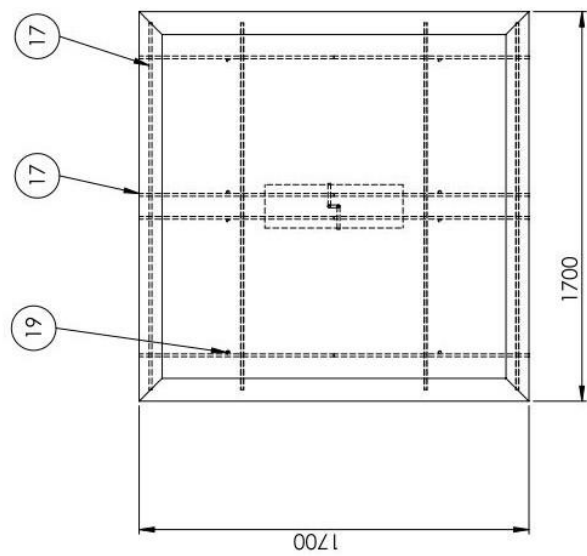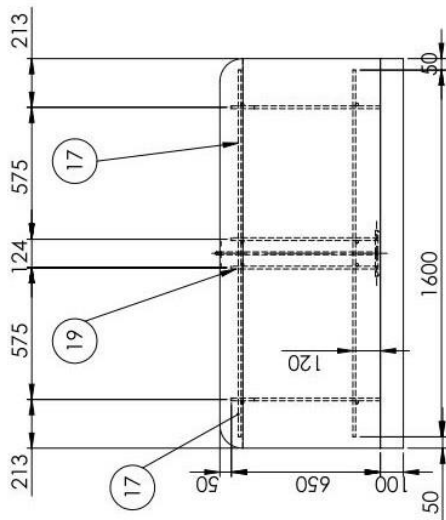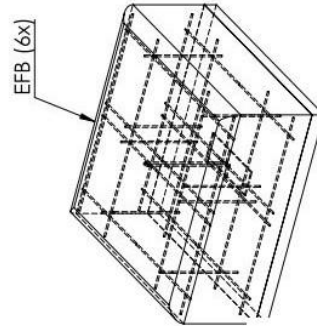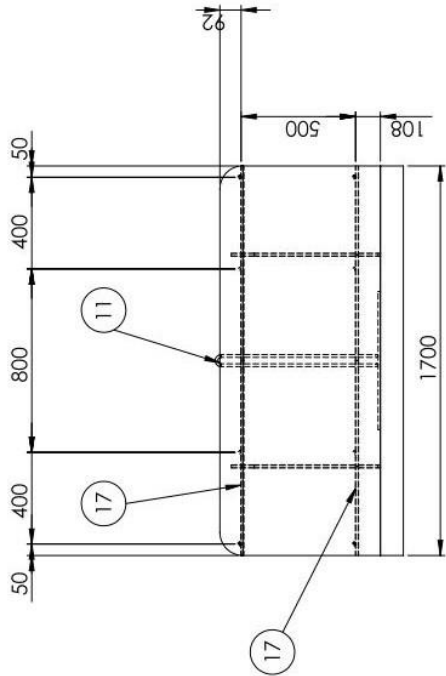


## Installing Pos. 1

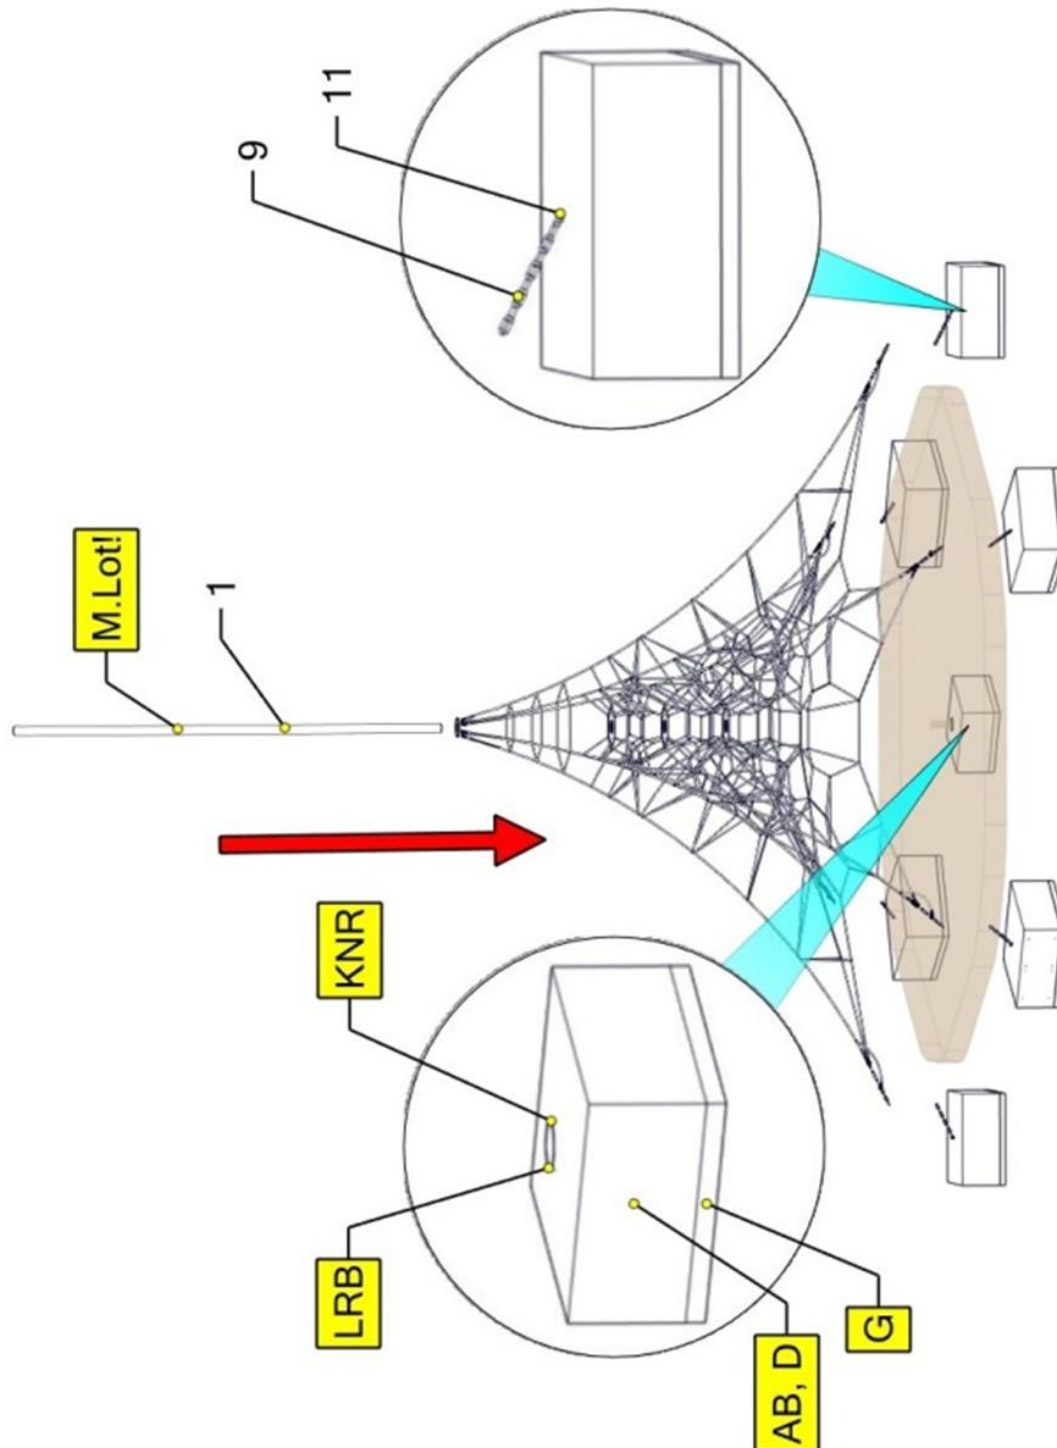

## Installing Pos.2 –Raise net


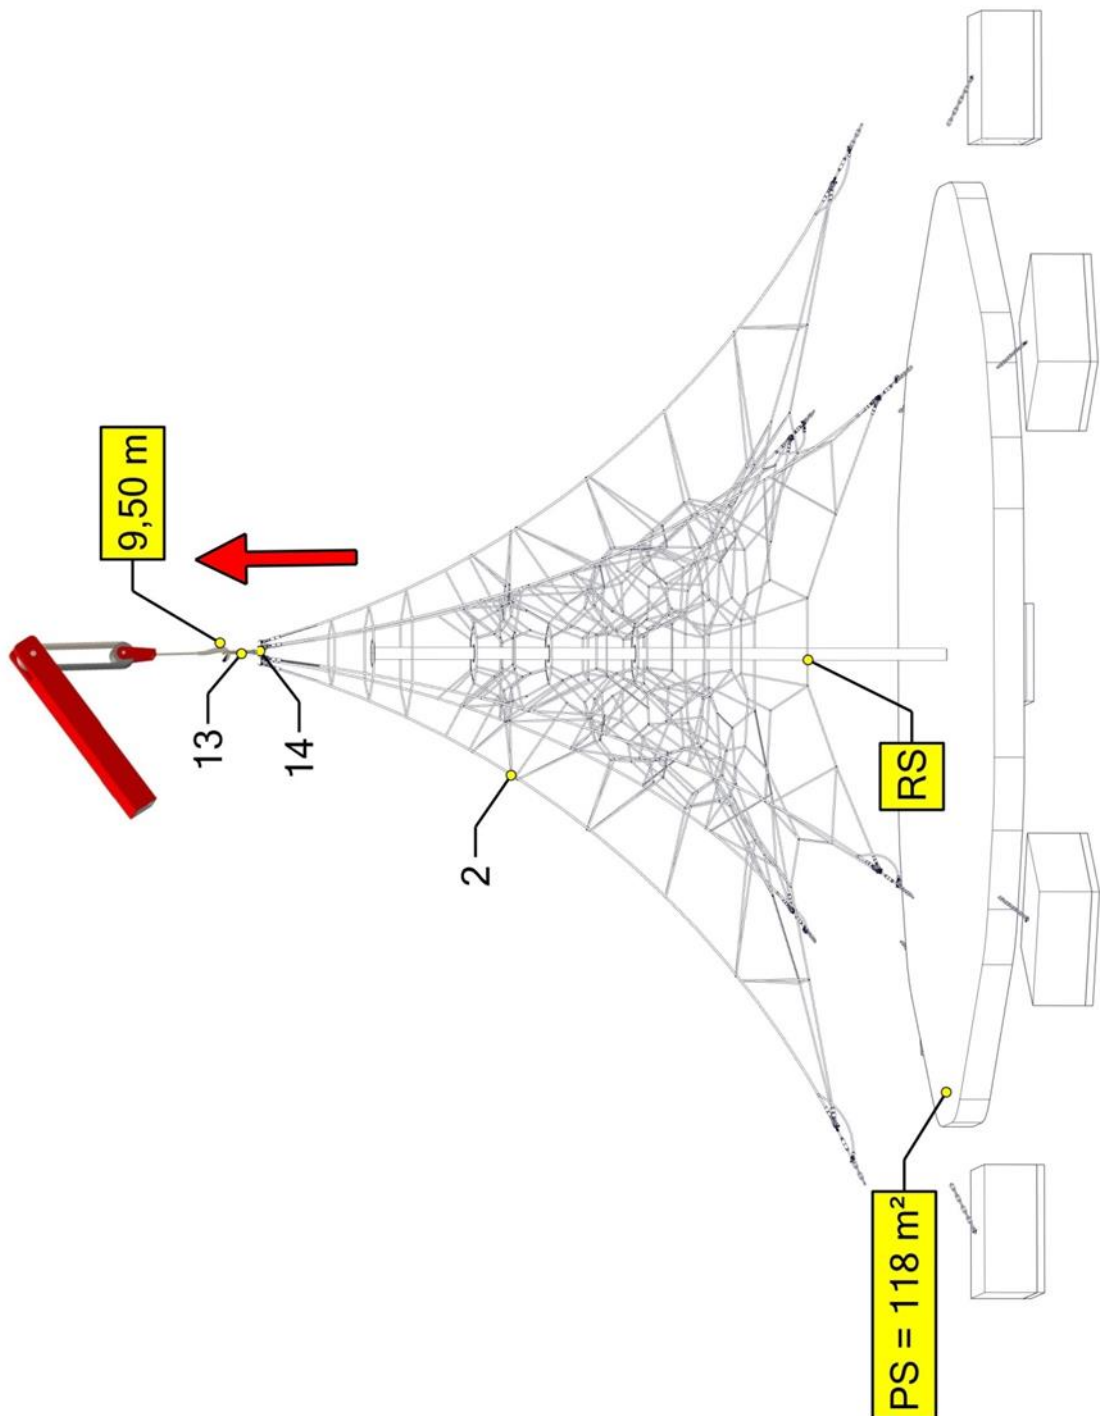


### Net - Alignment

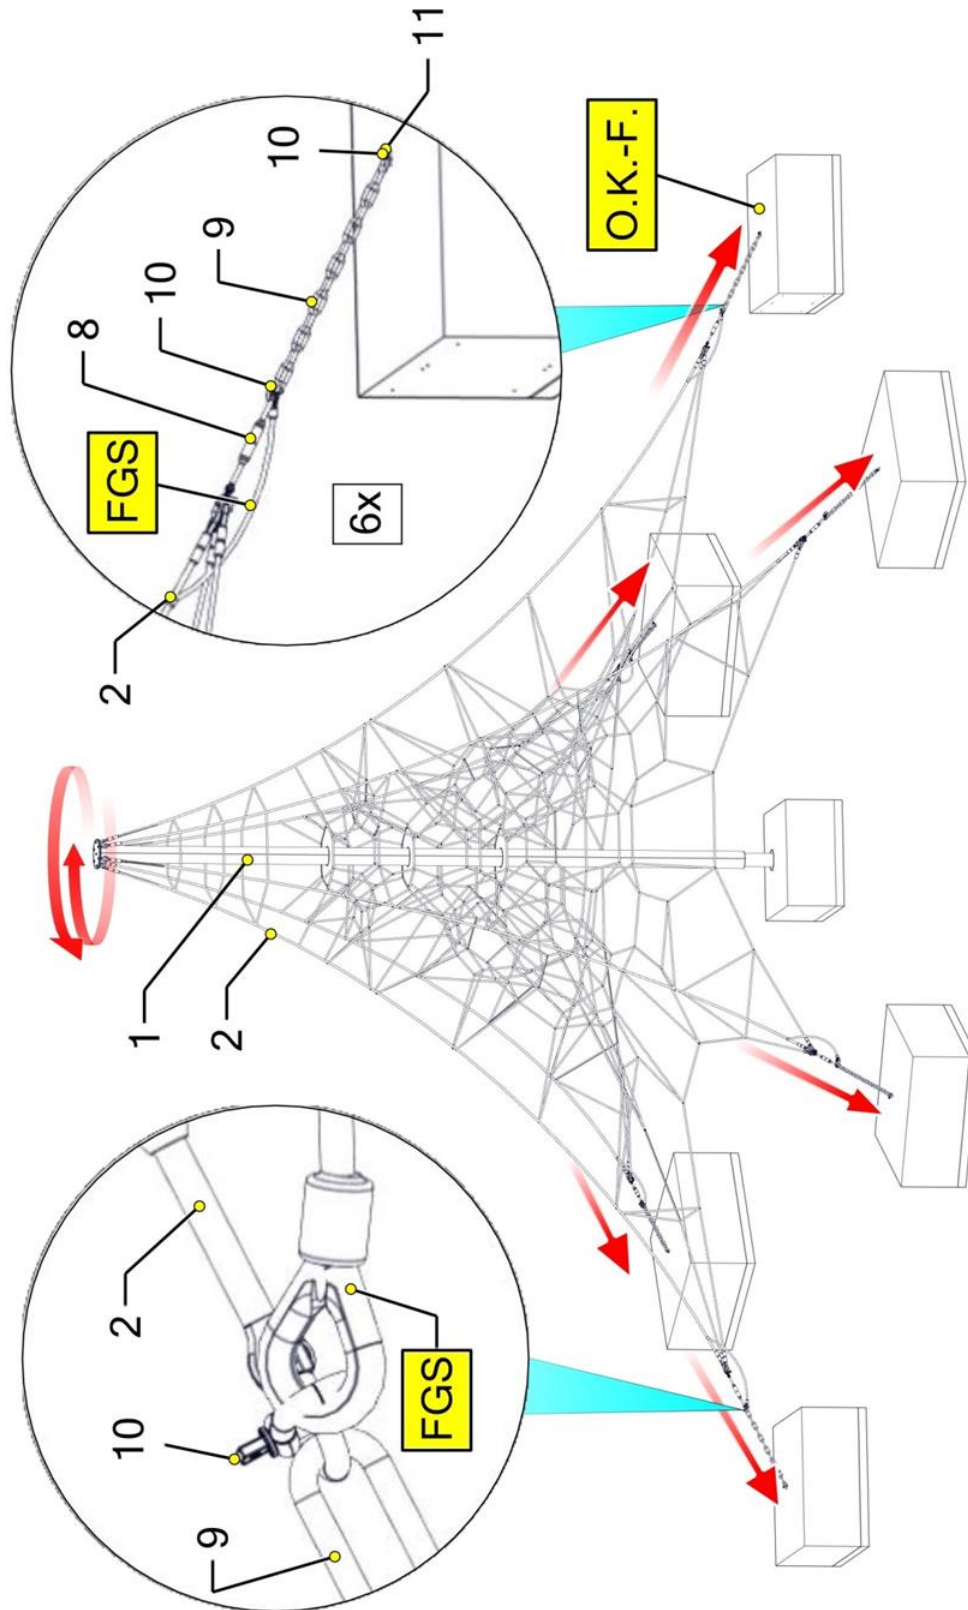


## Net – Tensioning

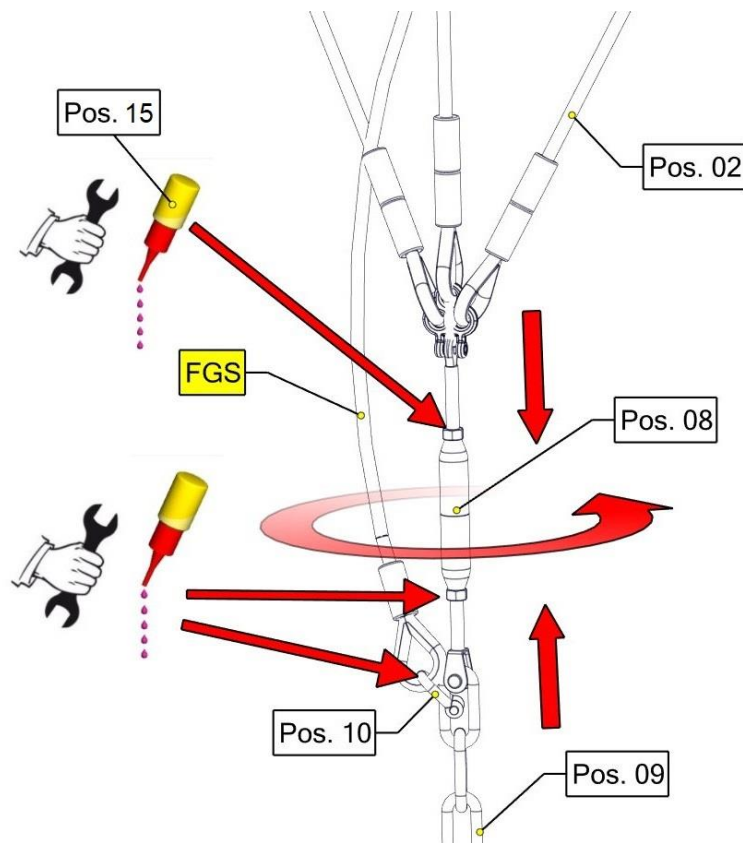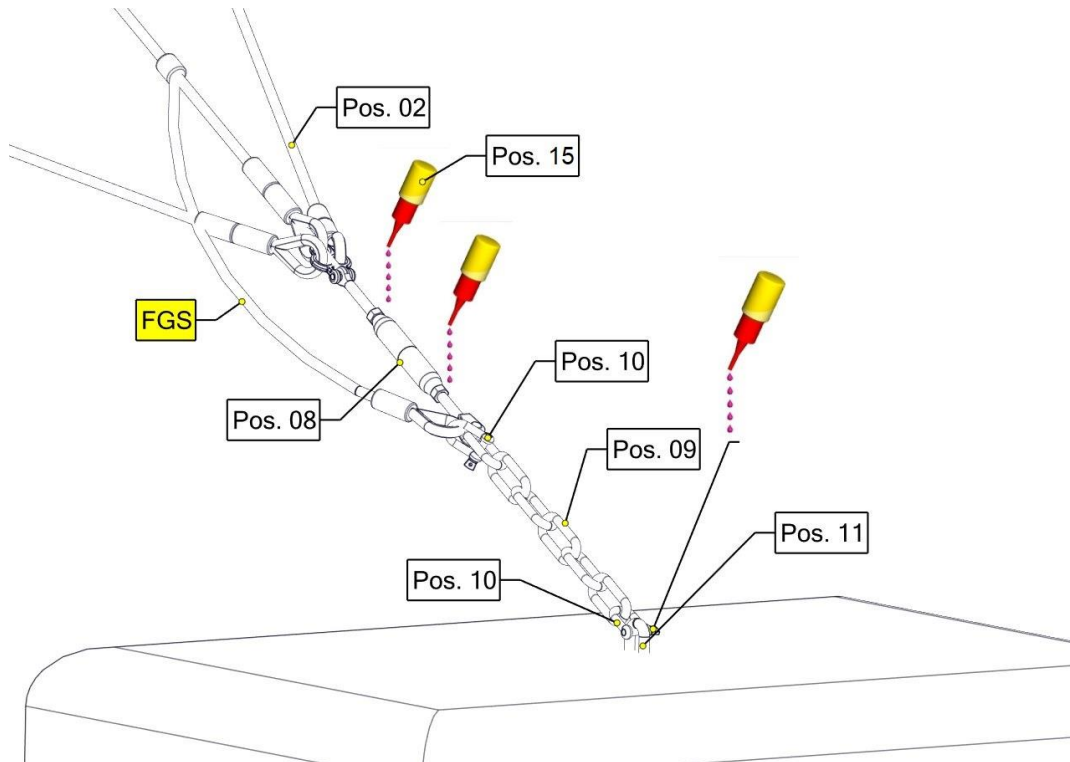
(Apply tension with 2 persons opposite from each other)





### Remove Installment Ring Pos.14

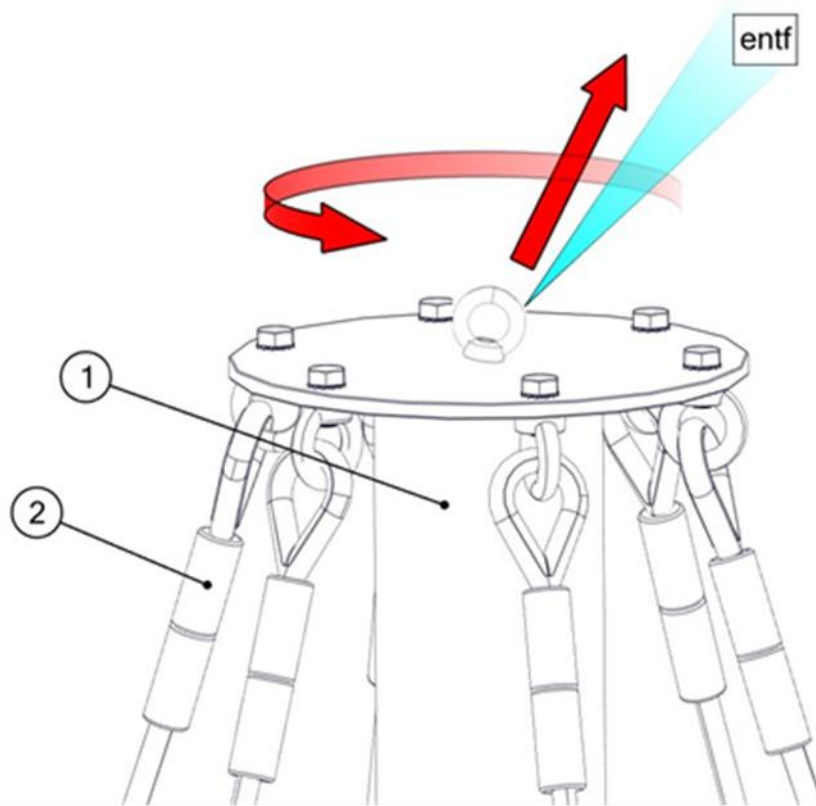

### Install Pos.4 and Pos.7 using Pos.15 (Loctite)

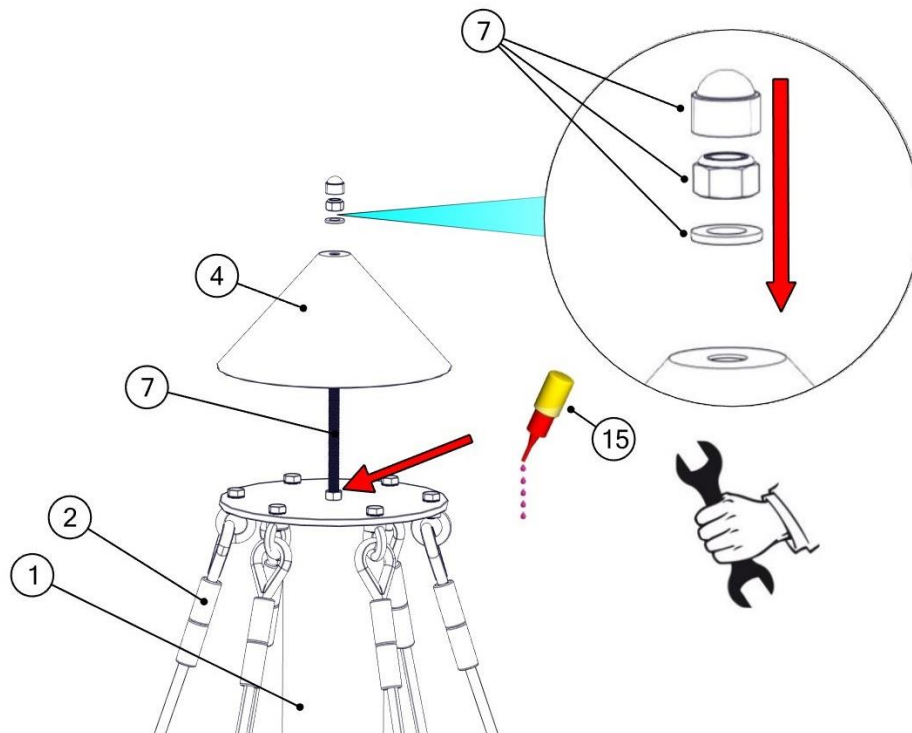

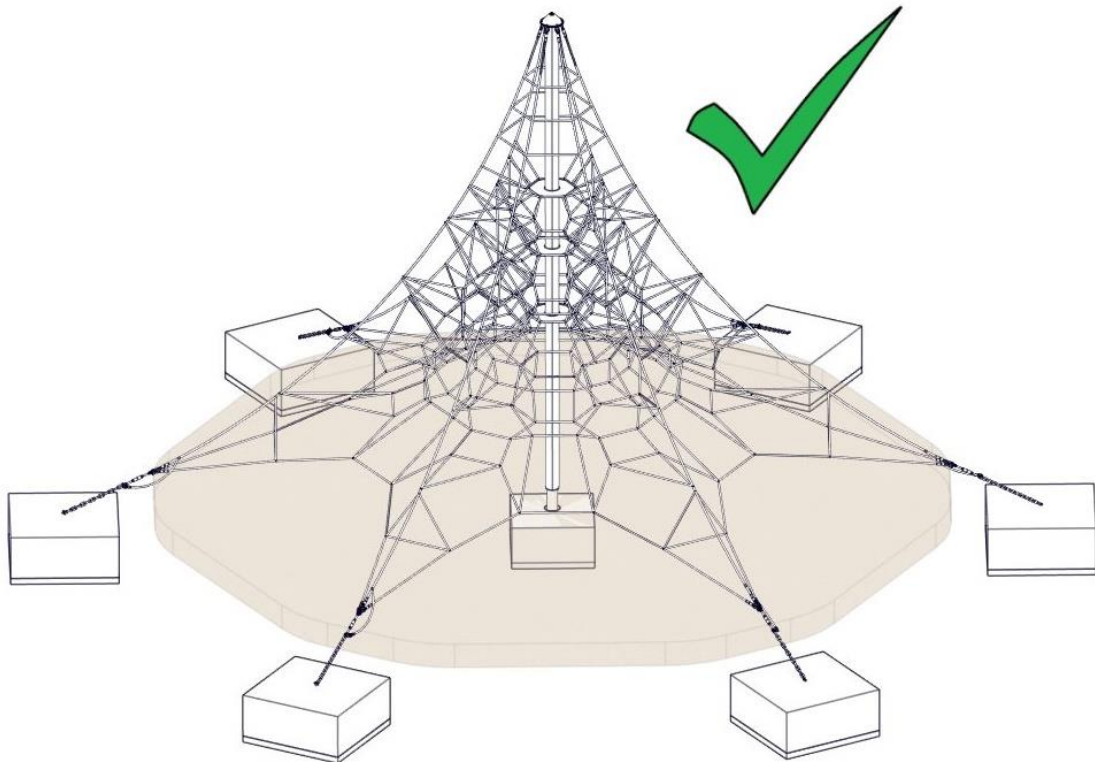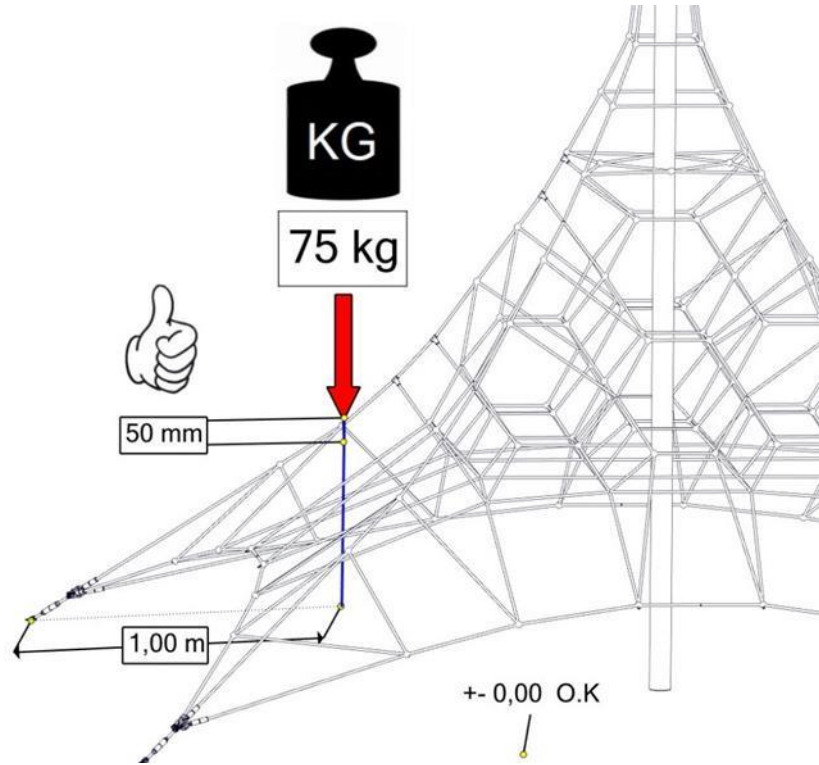

---

## Post installation checks

---



If the equipment has not been installed safely, you must ensure that the public is prevented from using it.

---

### 4.1 Marking filler depth

- Labelling the posts to show the depth of material provided as fall protection (i.e. loose filler).

### 4.2 The equipment has not been installed safely in the following cases:

- Installation of equipment is not complete.
- The protective surface has not been installed yet.
- Appropriate maintenance work cannot guarantee operational safety.

### 4.3 Removal of all assembly aids

- Please make sure that all assembly aids have been removed from the playing area. The equipment must not be approved for use until this check has been carried out.

### 4.4 Information about inspection of the equipment before it is used for the first time

- There are no special inspection requirements to be met before the equipment is used for the first time.

### 4.5 Retighten bolts

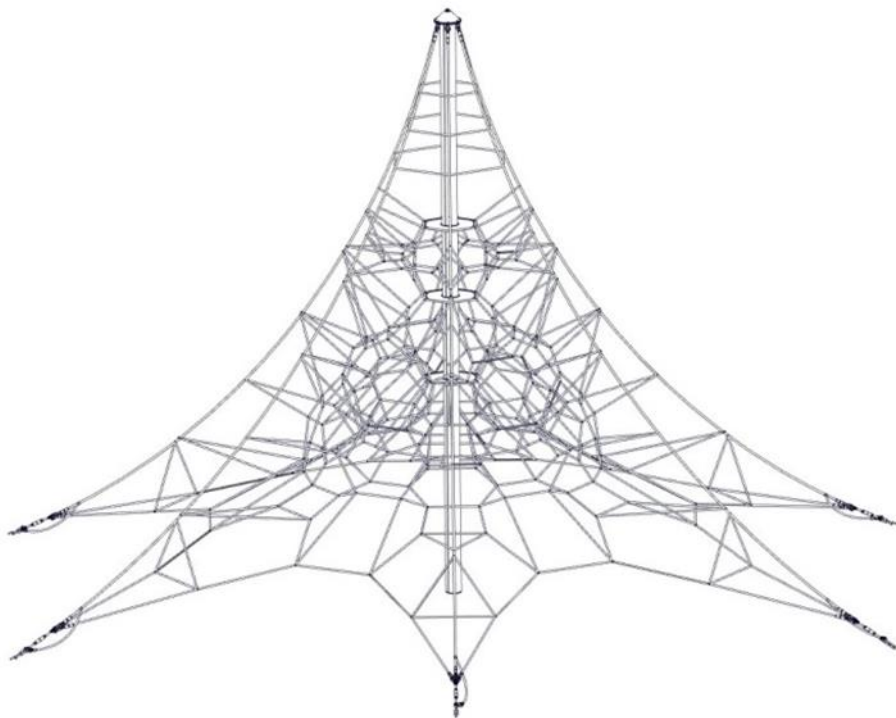
- After one week of play, please retighten all bolts again. Later upon respective maintenance.



---

## **B Maintenance Instruction**

### **Spider, Art.No. 5000-8-6**



---

## 5 Introduction Maintenance

### 5.1 General informations

This equipment should be installed, inspected, maintained and operated in accordance with EN 1176-7 guidelines.



**Please note:** Providing any necessary repairs are carried out, a piece of play equipment that is inspected regularly cannot become so damaged that it is dangerous.

---

Any spare parts which may be required can be obtained directly from your supplier.



This equipment should only be assembled, maintained and repaired by **persons with the necessary expertise**.

**A copy of the inspection record should be given to the operator, who must confirm receipt.**

---

**This maintenance instruction is based on the standard  
“EN 1176-1:2017”.**

## **6 General maintenance information**

### **6.1 Maintenance intervals**

Maintenance intervals are based on average use. Please note that more frequent inspections and/or maintenance are required if the play equipment is subject to intensive use.

### **6.2 Inspection frequency**

The frequency of inspections must be based on actual use. Factors that affect frequency include vandalism, location (e.g. coastal proximity), air pollution and the age of the equipment.

### **6.3 Maintenance products and procedures**

All nuts and bolts are hot-dip galvanised or stainless steel. One of the characteristics of stainless steel is that uncontrolled cold welding may occur when the nuts are tightened. To prevent this, it is necessary to spray the nuts and bolts with Teflon spray or another similar lubricant.

### **6.4 Spare parts**

All spare parts must conform to the manufacturer's specifications.

### **6.5 Identifying spare parts**

All spare parts are listed in the parts list. The parts list follows the installation requirements.

### **6.6 Special instructions for the disposal of individual equipment components**

No special instructions are necessary.

### **6.7 Special measures during the break-in period**

No later than 2 weeks after assembly, all screwed connections should be checked and tightened if necessary.

### **6.8 Maintenance of protective surfaces**

Surfaces providing fall protection must also be maintained regularly. It is particularly important to maintain the correct level of loose surface material and add more if necessary.

---

## 6.9 Faults

---



Damages must be repaired as soon as they are detected. If serious defects that affect the safety cannot be repaired straight away, the playground item must be blocked with immediate effect.

---

## 6.10 Loose screws

---



Loose screws always cause quality problems and put safety at risk. Therefore, loose screws should always be tightened and checks carried out to ensure that there are no missing screws.

---

## 6.11 Preventing equipment use

Use of the equipment should be prevented in the event of incomplete installation, disassembly, maintenance, repairs and faults.

## 6.12 Claims/liability for faults (steel poles)

Steel posts and footings are covered by our guarantee if regular maintenance is carried out and recorded in writing.

Our general terms and conditions apply. Maintenance of steel poles first takes place after 3 years. The steel posts must be excavated down to the concrete foundations and checked for corrosion.

Zinc paint should be applied to any corroded areas and scratches.

Check ropes for abrasion, replace ropes where coating is damaged down the Steel inlet.

---

## 7 Maintenance timetable

### 7.1 Special advices

#### 7.1.1 Maintenance interval

We strongly advise you to carry out inspections and maintenance work within the specified periods as use of the equipment, the weather and malicious vandalism cause wear and tear that compromises the safety and function of the equipment.

#### 7.1.2 Maintenance intervals in the event of intensive use

Please note that more frequent inspections and/or maintenance are required if the play equipment is subject to intensive use.

#### 7.1.3 Faults that compromise safety

---



In the event of a fault that compromises safety, quick action must be taken. This may involve repairing it immediately or shutting down and dismantling the equipment.

---

#### 7.1.4 Faults that compromise function

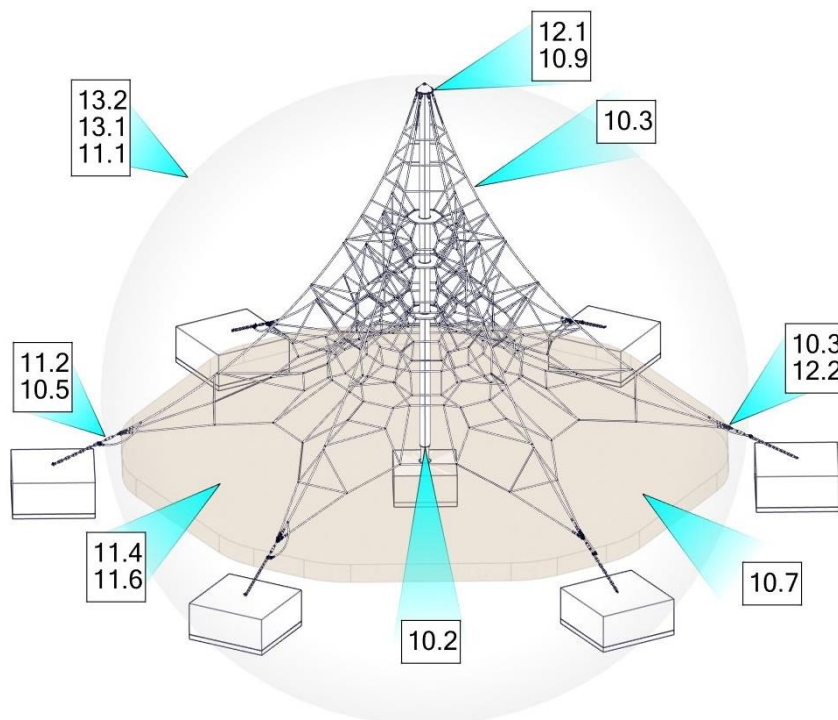
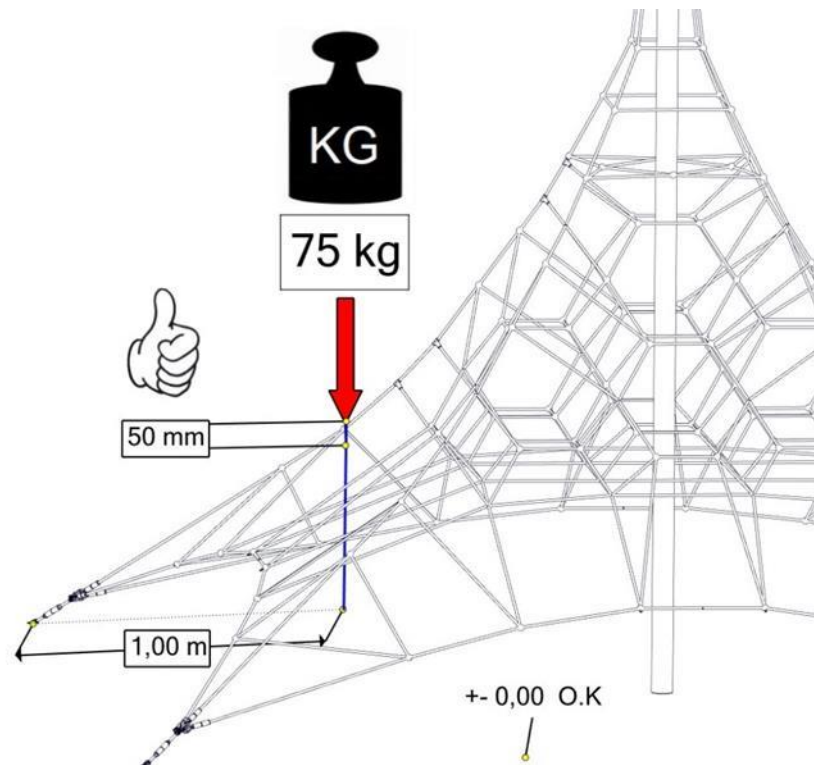
---



Faults that compromise function should also be repaired immediately. Such faults lower the value of the equipment to the user and encourage malicious vandalism, which may render the equipment less safe. Any damage should also be repaired immediately.

---

## 8 Regular maintenance



## **9 Monthly maintenance**

- 9.1 Check the spaces between the equipment and the ground (clearance and height of fall).**
- 9.2 Check the ground surface of fall protection for hard objects and loose foundations.**
- 9.3 Check all connecting elements and fittings for wear and tear and tighten if necessary. Replace damaged or missing parts.**
- 9.4 Check that moving metal parts (joints, springs, etc.) move smoothly and are not worn. Replace if necessary. It is not necessary to lubricate joints as we only use maintenance-free metal roller bearings.**
- 9.5 Check all attachments such as chains, ropes, nets, etc. for damage and replace if necessary.**
- 9.6 Check rubber parts, sleeves, etc. for wear and tear or damage and replace if necessary.**
- 9.7 If necessary, remove excess padding material from the post footings due to danger of rotting.**
- 9.8 Check the surface of wooden parts for damage caused by the weather or external influences and mould. Repair or replace if necessary.**
- 9.9 Check the surface of plastic and metal parts, e.g. slides, for damage and replace if necessary.**

## **10 Quarterly maintenance**

- 10.1 Detailed inspection of the operation and stability of the equipment paying particular attention to any wear and tear.**
- 10.2 Tighten all forms of attachment.**
- 10.3 Repaint and retreat surfaces.**
- 10.4 Maintenance of fall protection surfaces.**
- 10.5 Lubrication of joints.**
- 10.6 Check height of fall protection material and top up with loose filler if necessary. If the posts are labelled, top up to the mark.**
- 10.7 Retension the tension ropes after a period of 3 months. Afterwards please check in equal intervals.**
- 10.8 Retighten all bolts.**

## **11 Half yearly maintenance**

- 11.1 The stability of supporting posts, supports, foundations etc. has to be checked. The safety level of the entire system has to be checked after repairs have been carried out or additional system components have been installed or replaced.**



Attention

## Annual Maintenance

---

### 12 Annual maintenance

- 12.1 Ascertaining that the equipment, foundations and surfaces are safe for operation.
- 12.2 In particular, the equipment should be checked for decay and corrosion. It may be necessary to dig out or excavate certain components in order to do so. Zinc paint should be applied to corroded areas and scratches.



Attention

The equipment must be inspected by someone **with the necessary expertise** in strict compliance with the instructions issued by Huck Seiltechnik GmbH.

**A copy of the inspection record should be given to the operator, who must confirm receipt.**

---





### 13 Maintenance printout

Name of item: Spider \_\_\_\_\_ / Art. No. 5000-8-6 \_\_\_\_\_

Location: \_\_\_\_\_

Customer or operator: \_\_\_\_\_  
(Town, Town council, Kindergarten)

Date of inspection	Inspector	O.K.	Accessible	Barriered	Defects	Repaired by	Date

**Please copy and return once a year after main inspection has been carried out to the manufacturer by Telefax +49(0)6443/ 83 11 79! Place the confirmation form in the play equipment files.**



## 14 Hand over document

---



After the installation of the equipment pass the installation and maintenance documents to the operator. The operator has to receive the hand over documents. The complete filled and signed hand over document should be sent to the supplier.

---

Art.-No.: 5000-8-6

Type of item: Spider

Serial number: \_\_\_\_\_

**Customer or operator (Town, Town council, Kindergarten, etc.):**

\_\_\_\_\_  
\_\_\_\_\_

Competent person in charge:

\_\_\_\_\_  
\_\_\_\_\_

**Installation company (address):**

\_\_\_\_\_  
\_\_\_\_\_

Responsible assistant (assembler):

\_\_\_\_\_  
\_\_\_\_\_

Received the complete assembly instructions, maintenance instructions and maintenance printout.

\_\_\_\_\_

(Signature of operator)      (Signature of installation company)  
(Stamp)

Date: \_\_\_\_\_