


A Assembly instructions MIDI – Climbing Whirl, Art.-Nr. 20.01.135

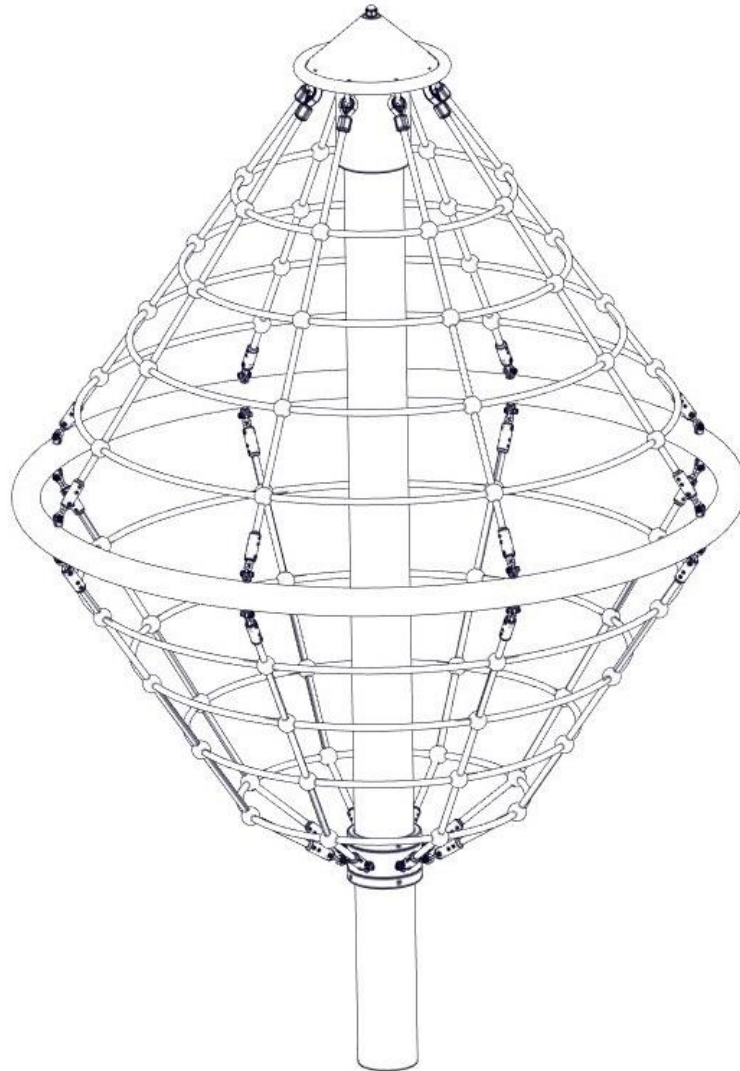

Operator: _____

Location: _____

Revision history

Revision 0 – 2010-15-04

The first allowed version

Assembly instructions JF

Revision 01– 2022-07-25

Drehschuh jetzt am Netz vormontiert FH

All rights reserved

© Copyright 2008 Spogg Sport-Güter GmbH

Inhaltsverzeichnis

A	Assembly instructions MIDI – Climbing Whirl, Nr. 20.01.135	Art.- 1
1	Introduction Assembling	6
1.1	General information	6
2	We hereby confirm that this play equipment has been tested and certified in accordance with the play equipment standard EN 1176.	6
3	Datenblatt: „MIDI“- Kletterwirbel Artikel-Nr. 20.01.135	8
	<u>Space requirement: Ø 2 m</u>	
	Recommended space requirement including safety zone Ø 10 m	
	Mandatory space requirement including safety zone Ø 7 m Fall height 1,70 m.....	8
	Required safety surface	8
	1. Name and overall dimension of the largest component: Steel mast(1 piece) Ø 159 mm - Länge: 3,80 m	8
	2. Name and weight of the heaviest component: Stahl post(1 piece) ~ 75 kg	8
	3. Intended age group: 3 years and over	8
	4. Please note that this equipment is set in concrete. Concrete: C20/25 (B25) Required concrete: 1 m ³ Foundations/area to be excavated: 1 x 1,20m long x 1,20m wide, total depth 1,10m incl. 10cm drainage layer Foundation size: 1x 1,20m long x 1,20m wide x 0,80m high.	8
	Round off foundation edges (min.R = 100 mm)! Sizes of foundations are “4-5” (natural ground).	9
	Soil class 4: soft to medium plasticity, interleave bound, with minor portion of stone (portion < 30% with bigger diameter of 63 mm grain size).	9
	Soil class 5 : ground with soil class 3 and 4 with big portion of stones (portion > 30% with bigger diameter of 63 mm grain size).	9
	In case of sandy and soft soils, the surface measure of foundations have to be enlarged for about 50%!	9
	5. Assembly time, once foundations completed: 3 hours. Required assistants: 2-3 persons.	9
	6. Any spare parts which may be required can be obtained directly from your supplier.....	9
	7. We hereby confirm that this item of play equipment has been tested and certified in accordance with the play equipment standard EN 1176.	9
	Delivery contents (parts list with part numbers)	10
	In words 10	
	Table 3-1: Delivery contents, in words.....	10
	3.1 in Symbols	11
	Tabels 0-2: Delivery contents, in symbols	11
4	Erection Instructions	13
	glue all screws, nuts and sleeves with loctite. (not less than 5 drops !) (except for lock nuts).	14
	Post installation checks	20
	Marking filler depth	20
	The equipment has not been installed safely in the following cases:.....	20
	Removal of all assembly aids	20
	Information about inspection of the equipment before it is used for the first time	20
	Retighten bolts 20	

B	Maintenance instructions MIDI - Climbing Whirl, Art.-Nr. 20.01.135	21
5	Introduction Maintenance	23
5.1	General informations	23
6	General maintenance information	24
6.1	Maintenance intervals	24
6.2	Inspection frequency	24
6.3	Maintenance products and procedures	24
6.4	Spare parts	24
6.5	Identifying spare parts	24
6.6	Special instructions for the disposal of individual equipment components	24
6.7	Special measures during the break-in period	24
6.8	Maintenance of protective surfaces	24
6.9	Faults	25
6.10	Loose screws	25
6.11	Preventing equipment use	25
6.12	Claims/liability for faults (steel poles)	25
7	Maintenance timetable	26
7.1	Special advices	26
7.1.1	Maintenance interval	26
7.1.2	Maintenance intervals in the event of intensive use	26
7.1.3	Faults that compromise safety	26
7.1.4	Faults that compromise function	26
8	26	
9	Regular Maintenance	27
	Monthly maintenance	28
	Check the spaces between the equipment and the ground (clearance and height of fall).	28
	Check the ground surface of fall protection for hard objects and loose foundations.	28
	Check all connecting elements and fittings for wear and tear and tighten if necessary. Replace damaged or missing parts.	28
	Check that moving metal parts (joints, springs, etc.) move smoothly and are not worn. Replace if necessary. It is not necessary to lubricate joints as we only use maintenance-free metal roller bearings.	28
	Check all attachments such as chains, ropes, nets, etc. for damage and replace if necessary.	28
	Check rubber parts, sleeves, etc. for wear and tear or damage and replace if necessary.	28
	If necessary, remove excess padding material from the post footings due to danger of rotting.	28
	Check the surface of wooden parts for damage caused by the weather or external influences and mould. Repair or replace if necessary.	28
	Check the surface of plastic and metal parts, e.g. slides, for damage and replace if necessary.	28
	Quarterly maintenance	28
	Detailed inspection of the operation and stability of the equipment paying particular attention to any wear and tear.	28

Tighten all forms of attachment.	28
Repaint and retreat surfaces.	28
Maintenance of fall protection surfaces.	28
Lubrication of joints.	28
Check height of fall protection material and top up with loose filler if necessary. If the posts are labelled, top up to the mark.	28
Retighten all bolts. 28	
Half yearly maintenance	28
The stability of supporting posts, supports, foundations etc. has to be checked. The safety level of the entire system has to be checked after repairs have been carried out or additional system components have been installed or replaced.	28
Annual maintenance	29
Ascertaining that the equipment, foundations and surfaces are safe for operation.	29
In particular, the equipment should be checked for decay and corrosion. It may be necessary to dig out or excavate certain components in order to do so. Zinc paint should be applied to corroded areas and scratches. 29	
Maintenance printout	31
Hand over document	33
 Tabellenverzeichnis	
Table 3-1: Delivery contents, in words	10
Tables 3-2: Delivery contents, in symbols.....	11

1 Introduction Assembling

1.1 General information

This equipment should be installed, inspected, maintained and operated in accordance with EN1176-7 guidelines.

Before installation work commences, please check that you have all of the equipment and fixation components in the parts list provided (see Tables 3-1 and 3-2).

Please consider that the installation has to be carried out only on even terrain (max.slope up to 3%).

Any spare parts that may be required can be obtained directly from your supplier.

Please do not hesitate to call your supplier if you have any problems during installation or in case of any other questions.



Attention

Following installation, complete assembly instructions, maintenance instructions and a maintenance record must be sent to the operator who must confirm receipt in writing. See the last page of this document.



Attention

All nuts and bolts are hot-dip galvanised or stainless steel.

One of the characteristics of stainless steel is that uncontrolled cold welding may occur when the nuts are tightened. To prevent this, it is necessary to spray the nuts and bolts with Teflon spray or another similar lubricant.

2 We hereby confirm that this play equipment has been tested and certified in accordance with the play equipment standard EN 1176.

Drawings / Views

All optical drawings are showing only the measurements/dimensions and are no mandatory technical views of the complete item.

We reserve the right to change technical details of our articles which are serving for the further development of our articles and are reasonable for the customer.

Measurement tolerances

Because of the properties and characteristics of the components, minor measurement tolerances compared to the indication on the sketches are possible.

This concerns all shown measurements except the foundation measurements resp. measurements below upper edge ground level/play area.

3 Datenblatt: „MIDI“- Kletterwirbel Artikel-Nr. 20.01.135

Space requirment: Ø 2 m

Recommended space requirment including safety zone Ø 10 m

Mandatory space requirment including safety zone Ø 7 m

Fall height 1,70 m

Required safety surface

Surface material	Description mm	Minimum thickness of layer mm	Maximum height of fall mm
Topsoil grass			<= 1000*
Chipped bark	20 – 80 grain size	400	<= 3000
Wood chippings	5 – 30 grain size	400	<= 3000
Sand	0.2 – 2 grain size	400	<= 3000
Gravel	2 – 8 grain size	400	<= 3000
Other ground materials	As recommended by manufacturer		

1. Name and overall dimension of the largest component: Steel mast(1 piece)
 Ø 159 mm - Länge: 3,80 m
2. Name and weight of the heaviest component:
 Stahl post(1 piece) ~ 75 kg
3. Intended age group: 3 years and over
- 4. Please note that this equipment is set in concrete.**
 Concrete: C20/25 (B25)
 Required concrete: 1 m³
 Foundations/area to be excavated:
1 x 1,20m long x 1,20m wide, total depth 1,10m incl. 10cm drainage layer
Foundation size:
 1x 1,20m long x 1,20m wide x 0,80m high.



Round off foundation edges (min.R = 100 mm)! Sizes of foundations are “4-5” (natural ground).

Soil class 4: soft to medium plasticity, interleave bound, with minor portion of stone (portion < 30% with bigger diameter of 63 mm grain size).

Soil class 5 : ground with soil class 3 and 4 with big portion of stones (portion > 30% with bigger diameter of 63 mm grain size).

In case of sandy and soft soils, the surface measure of foundations have to be enlarged for about 50%!

5. Assembly time, once foundations completed: 3 hours.
Required assistants: 2-3 persons.
6. Any spare parts which may be required can be obtained directly from your supplier.
7. **We hereby confirm that this item of play equipment has been tested and certified in accordance with the play equipment standard EN 1176.**

Delivery contents (parts list with part numbers)


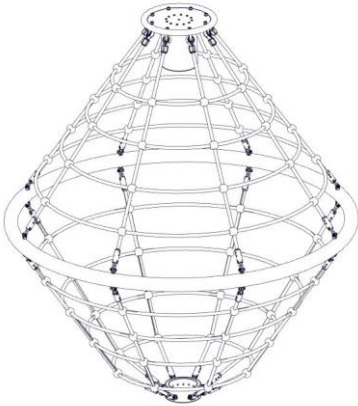







In words





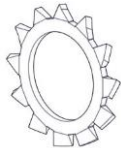

Table 3-1: Delivery contents, in words

Pos.	Quantity	Element / Description	Size	O.K.	Missing
1	1	Steel post	Ø 159 mm – 3,80 m		
2	1	Play component			
3	1	Post turning cover			
4	1	Turning cover cap			
5	2	Pinch protection rings	Ø 159 mm – 30 mm		
6	1	Green turning disk	Ø 160 mm		
100	8	Bolts	M10 x 20 mm		
101	8	Lock tooth washers	for M10		
102	1	Bolt rod	M16 – 165 mm.		
103	1	Lock nuts	M16		
104	1	Washers	für M16		
105	1	Nut	M16		
106	1	Nut cap	für M16		
107	8	Self-drilling screws	6,3 x 45 mm		
108	1	Grease			
109	1	Loctite (bolt and nut glue)	3 ml		


3.1 in Symbols

Tables 0-2: Delivery contents, in symbols


Pos.	Quantity	Symbol
1	1	 Ø 159 mm – 3,80 m
2	1	
4	1	 Ø 375 mm – 240 mm
5	2	 Pinch protection rings
6	1	 Green turning disk
100	8	 M10 x 20 mm lg.
101	8	 für M10
102	1	 M16 – 165 mm
103	1	

Pos.	Quantity	Symbol
		M16
104	1	 für M16
105	1	 M16
106	1	 für M16
107	8	 6,3 x 45 mm
108	1	
109	1	 Loctite



4 Erection Instructions


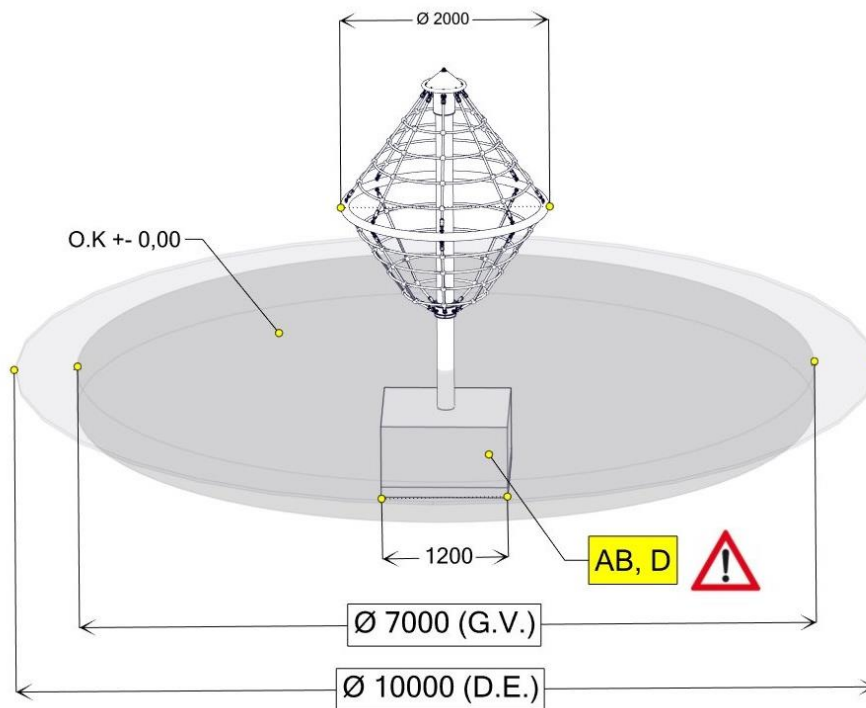




Screw locking device!

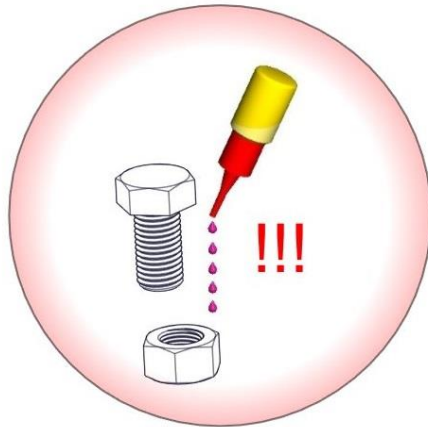



**glue all screws, nuts and sleeves with loctite.
(not less than 5 drops !)
(except for lock nuts)**

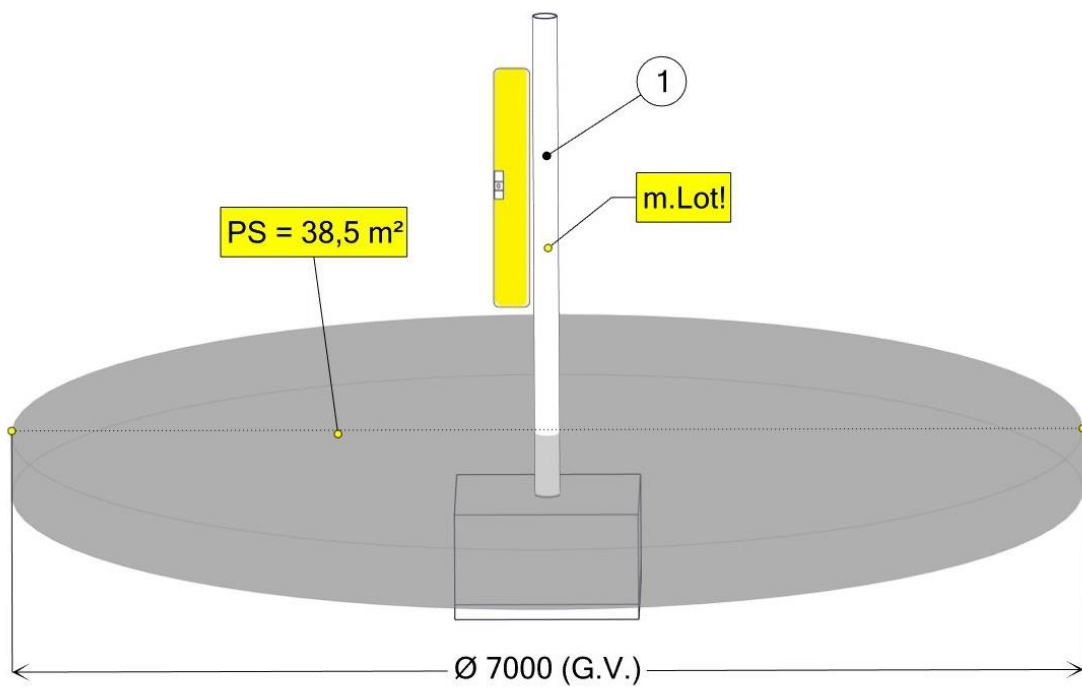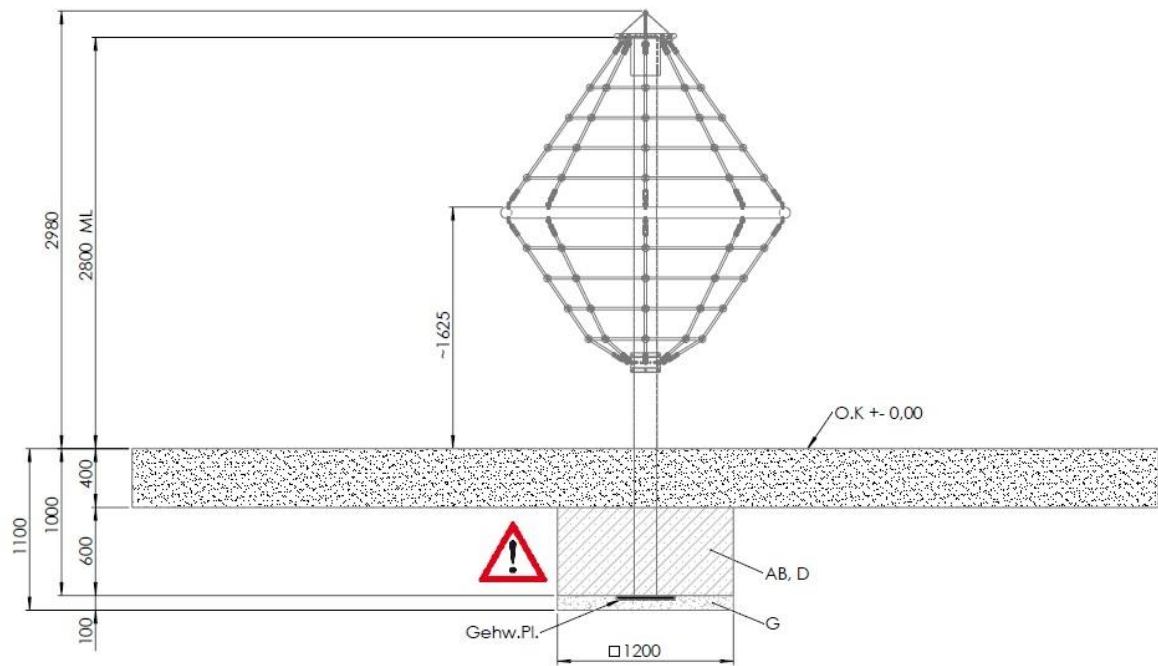

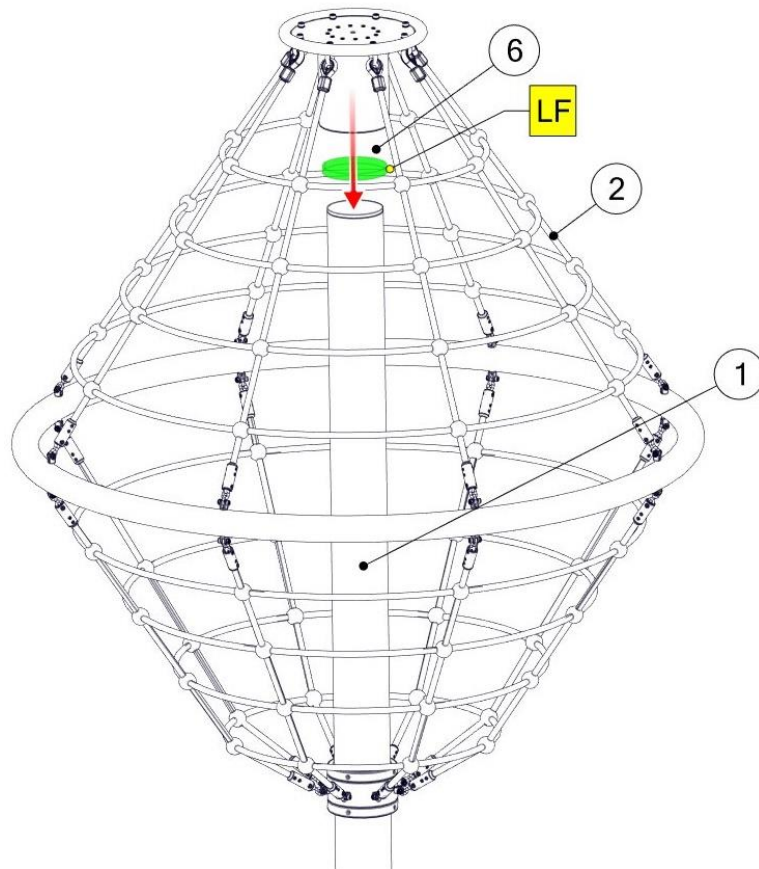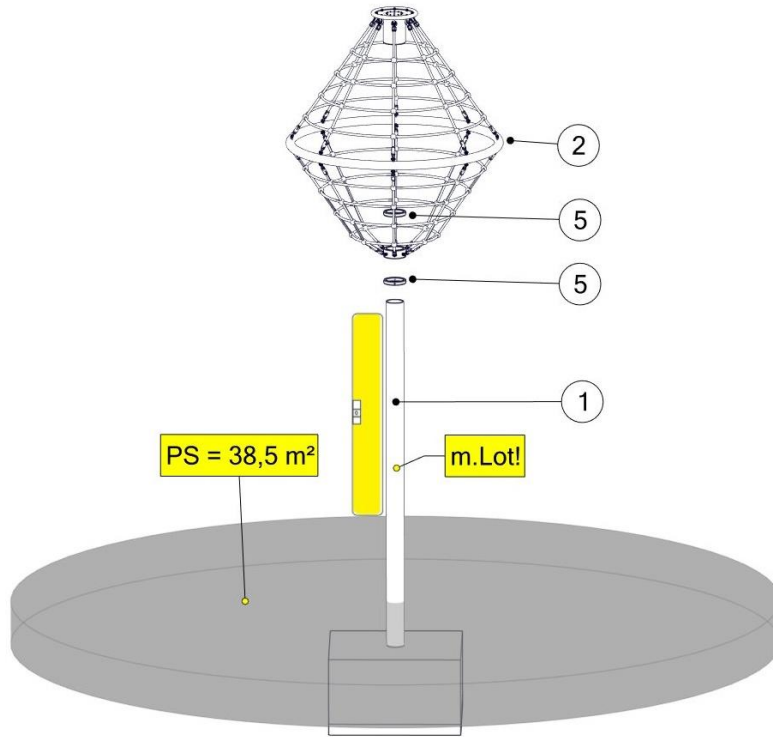

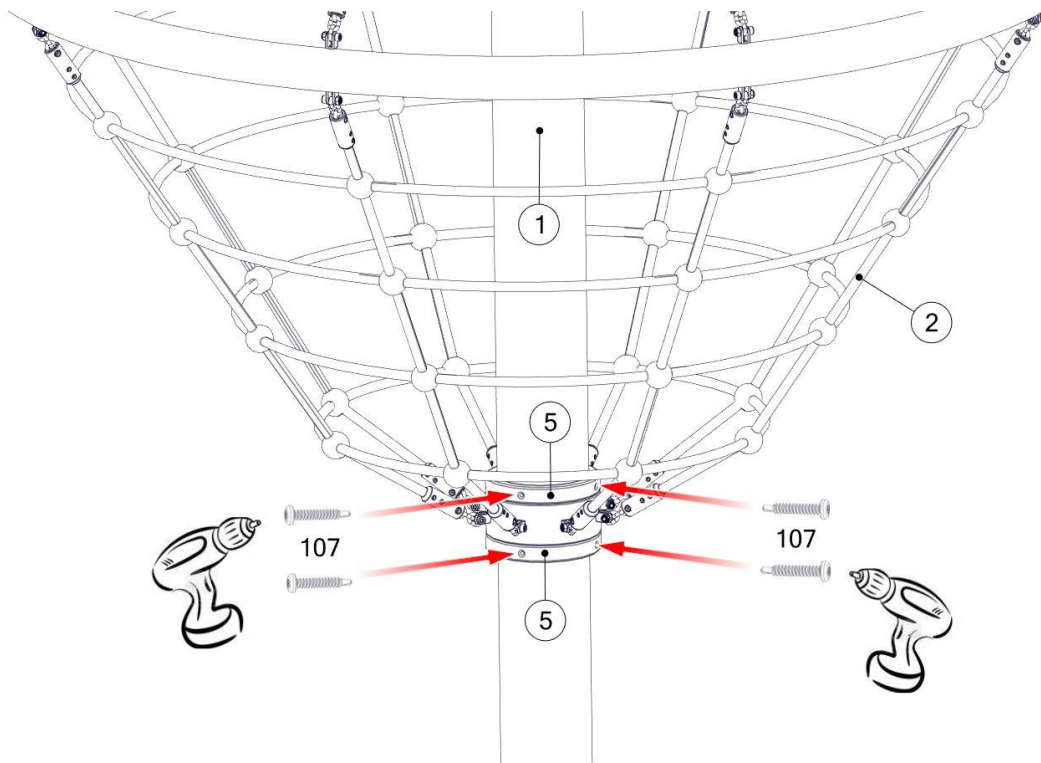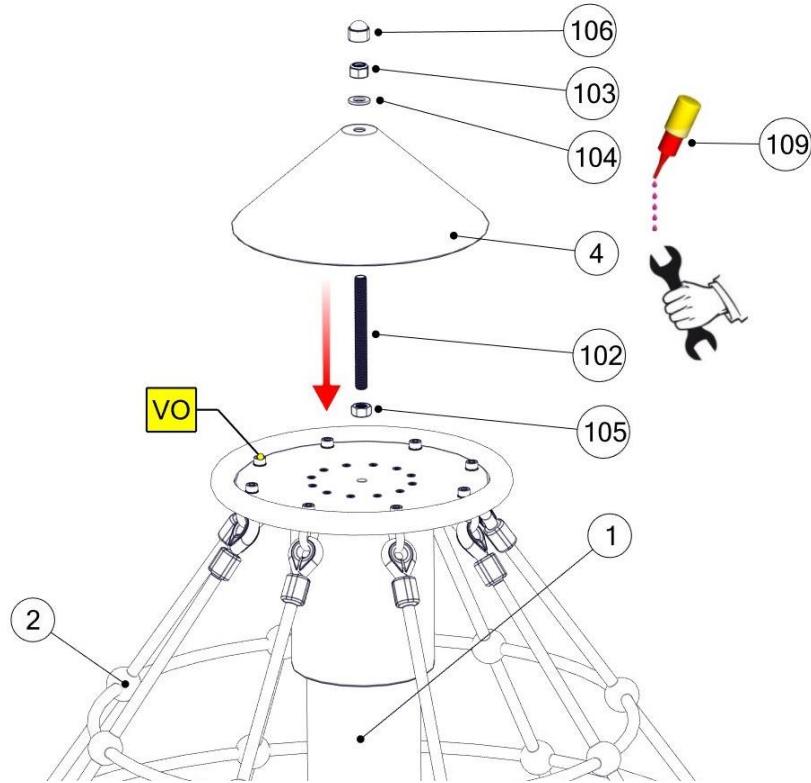

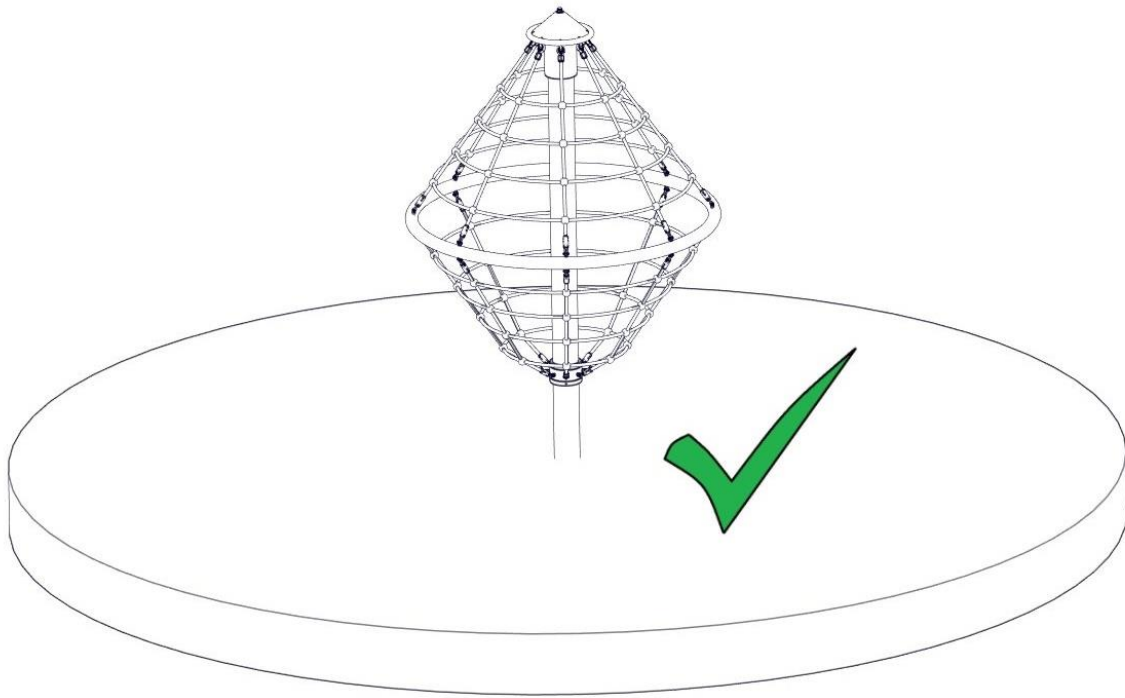

	<u>Shortcuts and abreviations:</u>
AB	The legally prescribed setting periods must be observed.
D	Concrete C20/25 (B25) for Foundations
DR	Top view
F	Fall protection
G	Drainage layer 10 cm
O.K	Upper edge of playing level
PS	Safety area
SA	Side view
Lf !	Apply grease
RW	Regular maintenance
M. Lot !	<u>Install mast vertically level!</u>
ML	Mast above ground level
	<p>Round off foundation edges (min.R = 100 mm)! Sizes of foundations are designed for soils class “4-5” (natural ground).</p> <p>Soil class 4: soft to medium plasticity, interleave bound, with minor portion of stone (portion < 30% with bigger diameter of 63 mm grain size).</p> <p>Soil class 5 : ground with soil class 3 and 4 with big portion of stones (portion > 30% with bigger diameter of 63 mm grain size).</p> <p>In case of sandy and soft soils, the surface measure of foundations have to be enlarged for about 50%!</p>

See drawings for details of shortcuts

Post installation checks



If the equipment has not been installed safely, you must ensure that the public is prevented from using it.

Marking filler depth

- Labelling the posts to show the depth of material provided as fall protection (i.e. loose filler).

The equipment has not been installed safely in the following cases:

- Installation of equipment is not complete.
- The protective surface has not been installed yet.
- Appropriate maintenance work cannot guarantee operational safety.

Removal of all assembly aids

- Please make sure that all assembly aids have been removed from the playing area. The equipment must not be approved for use until this check has been carried out.

Information about inspection of the equipment before it is used for the first time

- There are no special inspection requirements to be met before the equipment is used for the first time.


Retighten bolts

- After one week of play, please retighten all bolts again. Later upon respective maintenance.

B Maintenance instructions

MIDI - Climbing Whirl,

Art.-Nr. 20.01.135

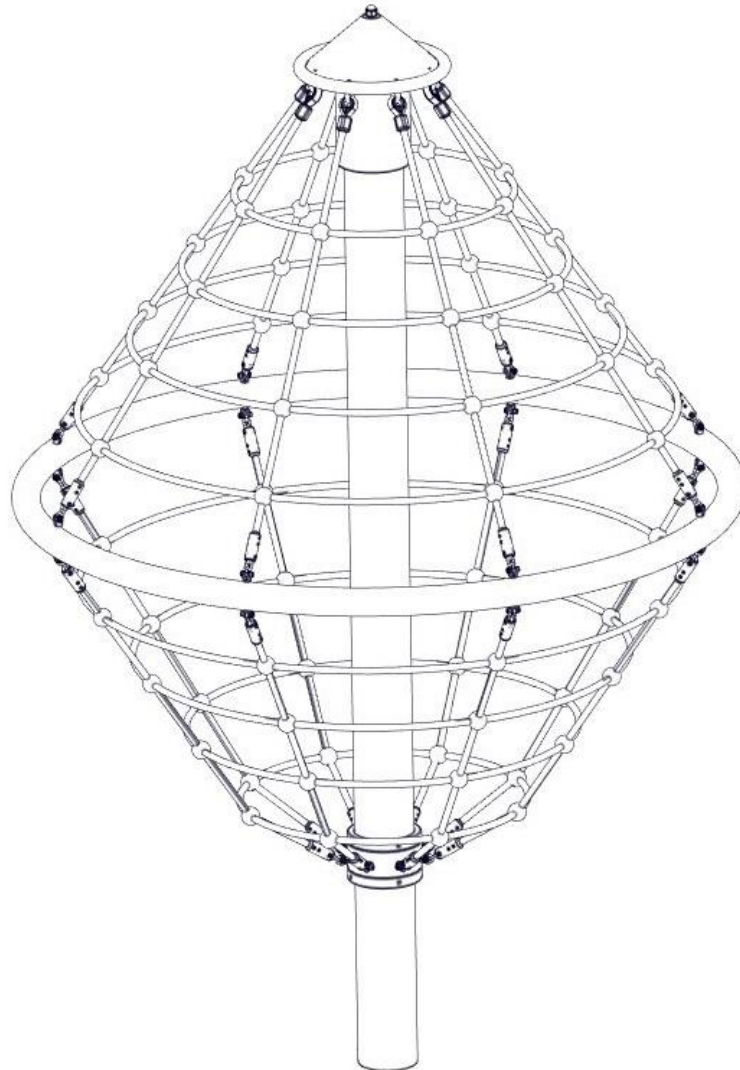

Revisionshistorie

Revision 0 – 2010-015.04

The first allowed version

Maintenance instructions

All rights reserved

© Copyright 2008 Spogg Sport-Güter GmbH

5 Introduction Maintenance

5.1 General informations

This equipment should be installed, inspected, maintained and operated in accordance with EN 1176-7 guidelines.



Please note: Providing any necessary repairs are carried out, a piece of play equipment that is inspected regularly cannot become so damaged that it is dangerous.

Any spare parts which may be required can be obtained directly from your supplier.



This equipment should only be assembled, maintained and repaired by **persons with the necessary expertise**.
A copy of the inspection record should be given to the operator, who must confirm receipt.

**This maintenance instruction is based on the standard
“EN 1176-1:2017”.**

6 General maintenance information

6.1 Maintenance intervals

Maintenance intervals are based on average use. Please note that more frequent inspections and/or maintenance are required if the play equipment is subject to intensive use.

6.2 Inspection frequency

The frequency of inspections must be based on actual use. Factors that affect frequency include vandalism, location (e.g. coastal proximity), air pollution and the age of the equipment.

6.3 Maintenance products and procedures

All nuts and bolts are hot-dip galvanised or stainless steel. One of the characteristics of stainless steel is that uncontrolled cold welding may occur when the nuts are tightened. To prevent this, it is necessary to spray the nuts and bolts with Teflon spray or another similar lubricant.

6.4 Spare parts

All spare parts must conform to the manufacturer's specifications.

6.5 Identifying spare parts

All spare parts are listed in the parts list. The parts list follows the installation requirements.

6.6 Special instructions for the disposal of individual equipment components

No special instructions are necessary.

6.7 Special measures during the break-in period

No later than 2 weeks after assembly, all screwed connections should be checked and tightened if necessary.

6.8 Maintenance of protective surfaces

Surfaces providing fall protection must also be maintained regularly. It is particularly important to maintain the correct level of loose surface material and add more if necessary.

6.9 Faults



Attention

Damages must be repaired as soon as they are detected. If serious defects that affect the safety cannot be repaired straight away, the playground item must be blocked with immediate effect.

6.10 Loose screws



Attention

Loose screws always cause quality problems and put safety at risk. Therefore, loose screws should always be tightened and checks carried out to ensure that there are no missing screws.

6.11 Preventing equipment use

Use of the equipment should be prevented in the event of incomplete installation, disassembly, maintenance, repairs and faults.

6.12 Claims/liability for faults (steel poles)

Steel posts and footings are covered by our guarantee if regular maintenance is carried out and recorded in writing.

Our general terms and conditions apply. Maintenance of steel poles first takes place after 3 years. The steel posts must be excavated down to the concrete foundations and checked for corrosion.

Zinc paint should be applied to any corroded areas and scratches.

Check ropes for abrasion, replace ropes where coating is damaged down the Steel inlet.

7 Maintenance timetable

7.1 Special advices

7.1.1 Maintenance interval

We strongly advise you to carry out inspections and maintenance work within the specified periods as use of the equipment, the weather and malicious vandalism cause wear and tear that compromises the safety and function of the equipment.

7.1.2 Maintenance intervals in the event of intensive use

Please note that more frequent inspections and/or maintenance are required if the play equipment is subject to intensive use.

7.1.3 Faults that compromise safety




In the event of a fault that compromises safety, quick action must be taken. This may involve repairing it immediately or shutting down and dismantling the equipment.

7.1.4 Faults that compromise function



Faults that compromise function should also be repaired immediately. Such faults lower the value of the equipment to the user and encourage malicious vandalism, which may render the equipment less safe. Any damage should also be repaired immediately.

9 Regular Maintenance

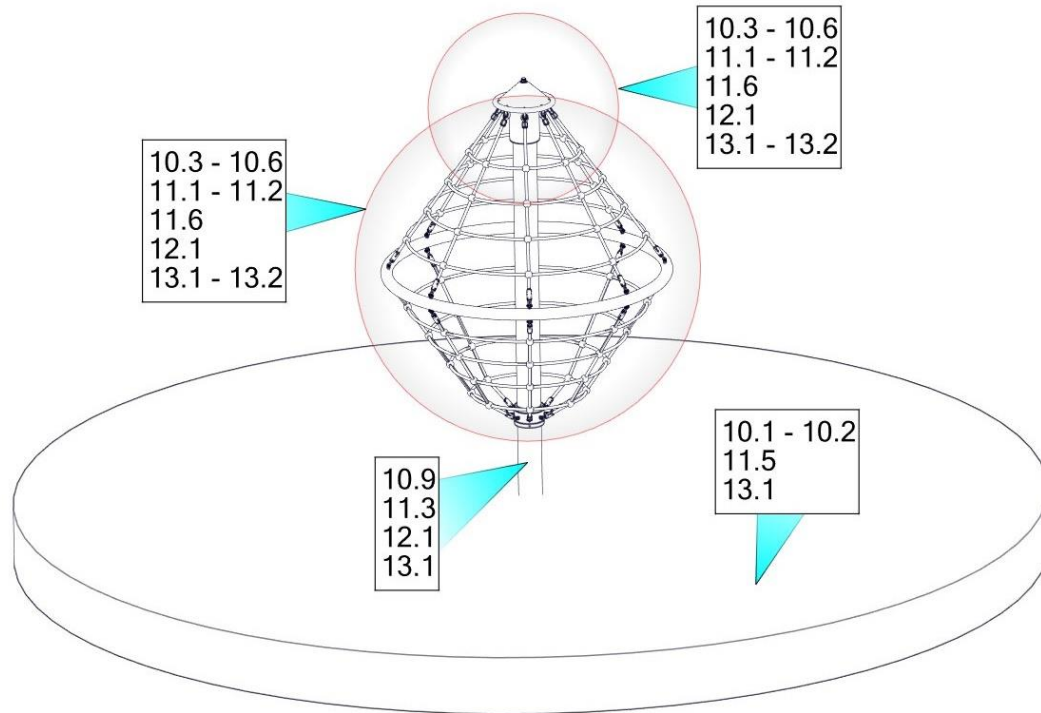

10 Monthly maintenance

10.1 Check the spaces between the equipment and the ground (clearance and height of fall).

10.2 Check the ground surface of fall protection for hard objects and loose foundations.

10.3 Check all connecting elements and fittings for wear and tear and tighten if necessary. Replace damaged or missing parts.

10.4 Check that moving metal parts (joints, springs, etc.) move smoothly and are not worn. Replace if necessary. It is not necessary to lubricate joints as we only use maintenance-free metal roller bearings.

10.5 Check all attachments such as chains, ropes, nets, etc. for damage and replace if necessary.

10.6 Check rubber parts, sleeves, etc. for wear and tear or damage and replace if necessary.

10.7 If necessary, remove excess padding material from the post footings due to danger of rotting.

10.8 Check the surface of wooden parts for damage caused by the weather or external influences and mould. Repair or replace if necessary.

10.9 Check the surface of plastic and metal parts, e.g. slides, for damage and replace if necessary.

11 Quarterly maintenance

11.1 Detailed inspection of the operation and stability of the equipment paying particular attention to any wear and tear.

11.2 Tighten all forms of attachment.

11.3 Repaint and retreat surfaces.

11.4 Maintenance of fall protection surfaces.

11.5 Lubrication of joints.

11.6 Check height of fall protection material and top up with loose filler if necessary. If the posts are labelled, top up to the mark.

11.7 Retighten all bolts.

12 Half yearly maintenance

12.1 The stability of supporting posts, supports, foundations etc. has to be checked. The safety level of the entire system has to be checked after repairs have been carried out or additional system components have been installed or replaced.



Annual Maintenance

13 Annual maintenance

13.1 Ascertaining that the equipment, foundations and surfaces are safe for operation.

13.2 In particular, the equipment should be checked for decay and corrosion. It may be necessary to dig out or excavate certain components in order to do so. Zinc paint should be applied to corroded areas and scratches.



The equipment must be inspected by someone **with the necessary expertise** in strict compliance with the instructions issued by Huck Seiltechnik GmbH.

A copy of the inspection record should be given to the operator, who must confirm receipt.

Maintenance printout

Name of item: MIDI – Climbing Whirl _____ / Art.-Nr. 20.01.135 _____

Location: _____

Customer or operator: _____

(Town, Town council, Kindergarten)

Date of inspection	Inspector	O.K.	Accessi-ble	Barriered	Defects	Re-paired by	Date

Please copy and return once a year after main inspection has been carried out to the manufacturer by Telefax +49(0)6443/83 11 79!

Place the confirmation form in the play equipment files.

Hand over document



After the installation of the equipment pass the installation and maintenance documents to the operator. The operator has to receive the hand over documents. The complete filled and signed hand over document should be sent to the supplier.

Art.-Nr.: 20.01.135

Name of item: MIDI – Climbing Whirl

Serial number: _____

Customer or operator (Town, Town council, Kindergarten, etc.):

Competent person in charge:

Installation company (address):

Responsible assistant (assembler):

Received the complete assembly instructions, maintenance instructions and maintenance printout .

(Signature of operator) (Signature of installation company)
(Stamp)

Date: _____