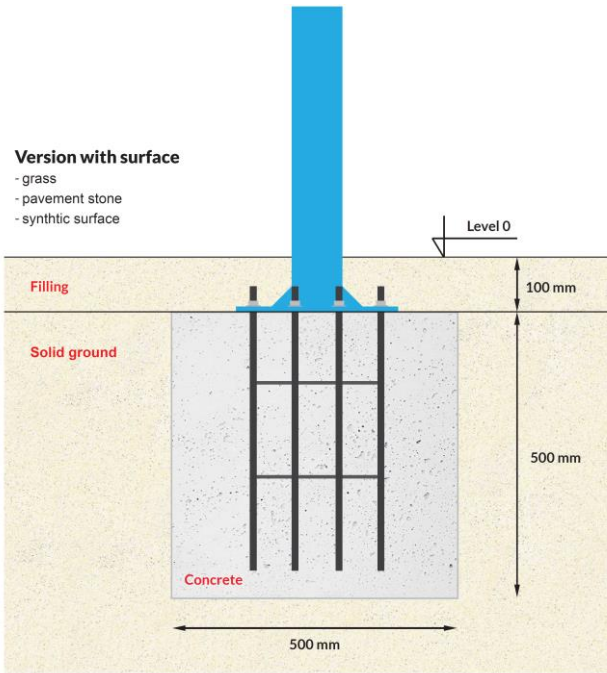
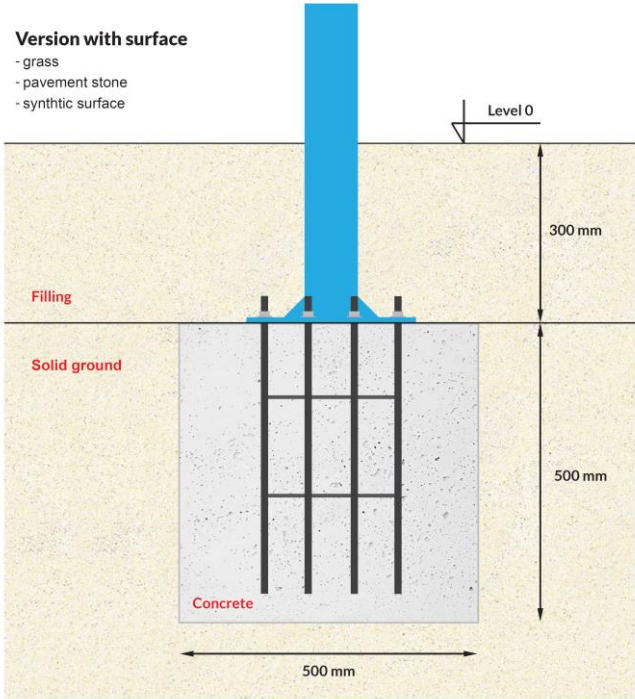
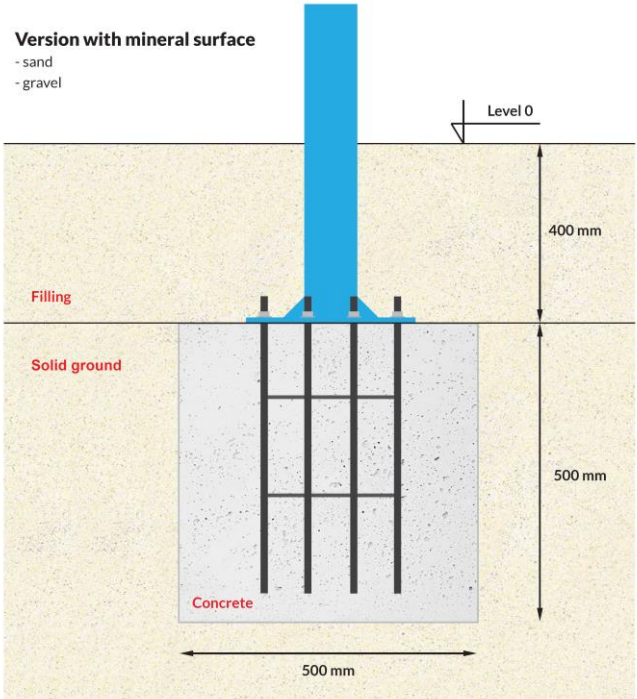


INSTALLATION GUIDE FOR FITNESS DEVICES

Final surface: Turf Synthetic surface		Final surface: Sand Gravel
All device except of: RUNNER, DOUBLE RUNNER, TWISTER+RUNNER+PENDULUM	Only for: RUNNER, DOUBLE RUNNER, TWISTER+RUNNER+PENDULUM	All devices
<p>Version with surface</p> <ul style="list-style-type: none"> - grass - pavement stone - synthetic surface  <p>Filling</p> <p>100 mm</p> <p>Solid ground</p> <p>500 mm</p> <p>Concrete</p> <p>500 mm</p> <p>Level 0</p>	<p>Version with surface</p> <ul style="list-style-type: none"> - grass - pavement stone - synthetic surface  <p>Filling</p> <p>300 mm</p> <p>Solid ground</p> <p>500 mm</p> <p>Concrete</p> <p>500 mm</p> <p>Level 0</p>	<p>Version with mineral surface</p> <ul style="list-style-type: none"> - sand - gravel  <p>Filling</p> <p>400 mm</p> <p>Solid ground</p> <p>500 mm</p> <p>Concrete</p> <p>500 mm</p> <p>Level 0</p>

Order of installation:

1. Marking of foundation holes and a safety zone.
2. Dig a foundation hole to the depth appropriate for the device and the surface.
3. Place the steel anchor on the bottom of the hole, level it and verify the depth and position of the depth and position of the top of the anchor.
4. Once the anchor is properly positioned, fill the hole with concrete so that the threaded rods of anchor protrude 40-45 mm above the concrete level.
Make sure that the anchor is placed at the right angle and position!
5. After the concrete has hardened, place the device on the threaded rods of the anchors protruding from the foundation. Be careful not to damage them.
6. Prepare the mounting elements.
 - 4 M16 galvanized washers;
 - 4 M16 galvanized nuts;
 - key No. 24.
7. Put a washer and a nut on each thread. Tighten the nuts gently with a wrench.
8. Check that the device is properly seated (vertical, horizontal). Make sure the device is stable. If the unit is not level, align it by adding washers for the threaded rods under the unit. If the device is level, tighten the nuts as much as possible and put on the plastic protective plugs.
9. After tightening the screws, fill the hole with ground (soil).
10. Place the proper surface layer around the device.