


Subbase

The substrate must be frost-proof and level.

Installation

The EUROFLEX® rocks may be installed directly into a prepared fresh concrete bed using ground anchors on a load-bearing, compacted substructure, or mounted via a steel plate (sold separately).


The metal pipe shall be bonded to the rock using polyurethane adhesive Ottocoll P83 (gray). One cartridge is sufficient to bond three rocks.

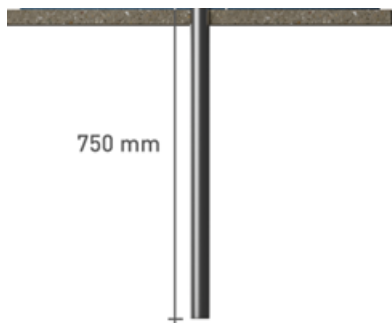

Outer diameter tube approx. 42mm, inner diameter approx. 38mm

Steel plate Base plate:

Steel ground anchor:

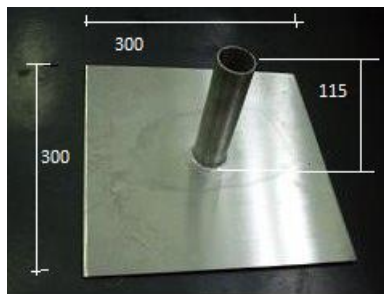

Outer diameter of tube approx. 40 mm

The tube must be positively bonded to the rocks.

The rocks can also be inserted directly into a fresh concrete bed or form-fit bonded with our slabs material.



All information without guarantee, subject to change. The installation instruction is not subject to any change service. Each current and valid from can be recalled at www.kraiburg-relastec.com/euroflex/

page 2 of 2