


### Substructure

The substructure must be frost-stable and even level.

### Installation

EUROFLEX® S – & C – Block can be loosely stacked on flat, stable arranged underground, or fully glued together permanently.

When installing on elastic, rubber-based substrates, a glue to the substrate is possible. Gluing should done with a polyurethane based glue Ottocoll M500 (red) or P83 (grey).

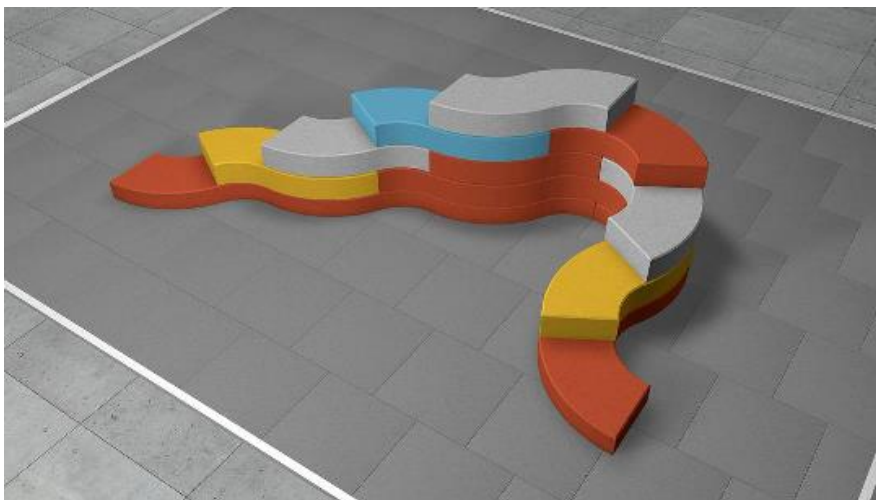


To avoid colour variations due to differences in sunlight exposure, leave the UV protection film on the product as supplied until just prior to installation.

All information without guarantee, subject to change. The installation instruction is not subject to any change service. Each current and valid from can be recalled at [www.kraiburg-relastec.com/euroflex/](http://www.kraiburg-relastec.com/euroflex/)

page 1 of 2

### Possible Designs

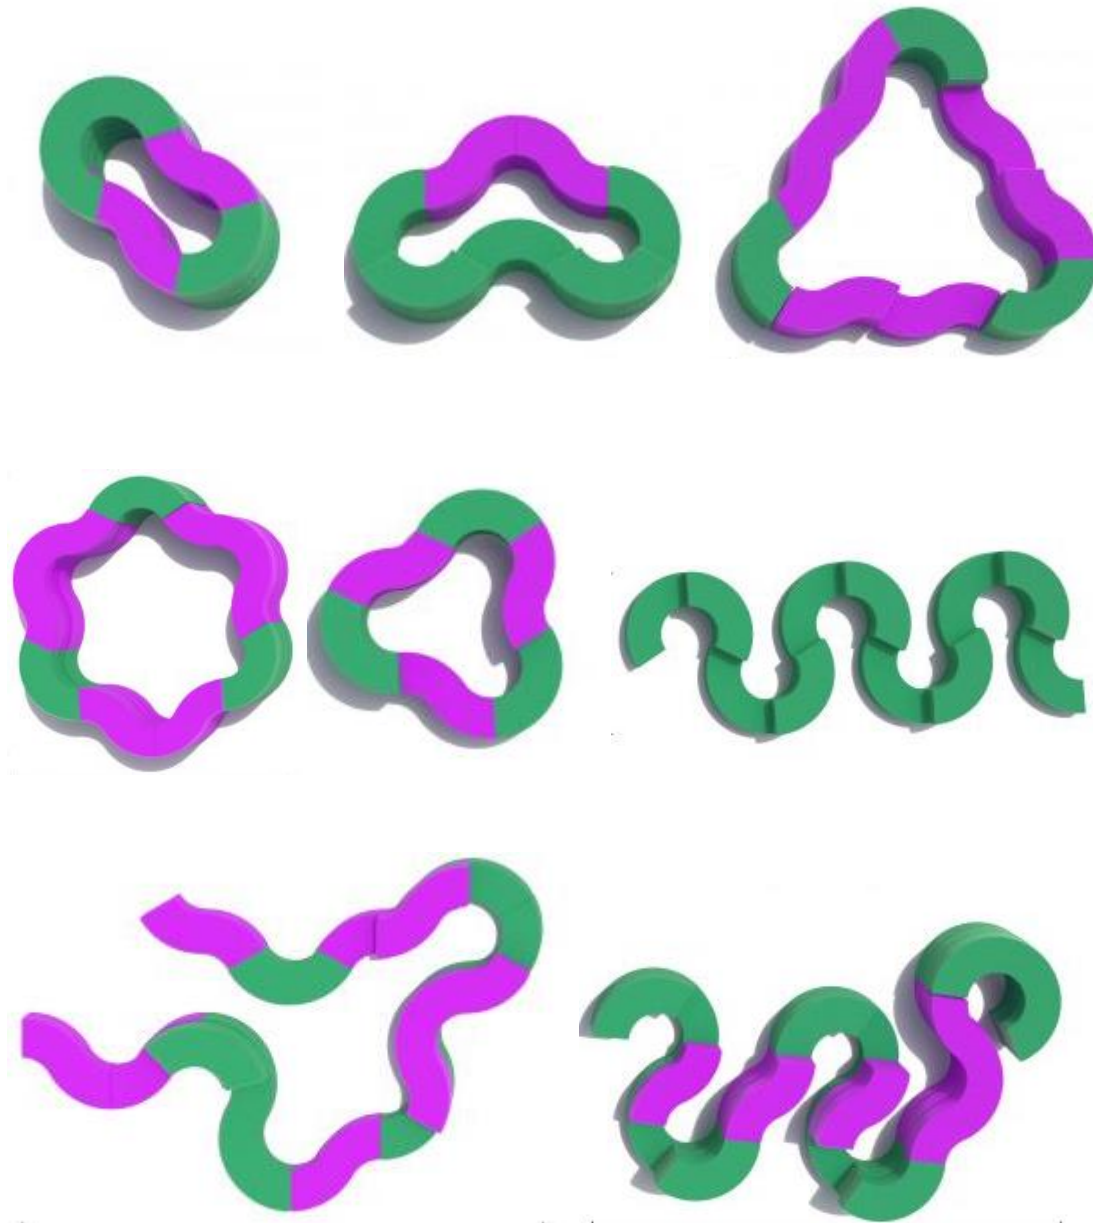

All information without guarantee, subject to change. The installation instruction is not subject to any change service. Each current and valid from can be recalled at [www.kraiburg-relastec.com/euroflex/](http://www.kraiburg-relastec.com/euroflex/)

page 2 of 2