

**Monteringsanvisning****Assembly Instructions****Monteringsanvisning**

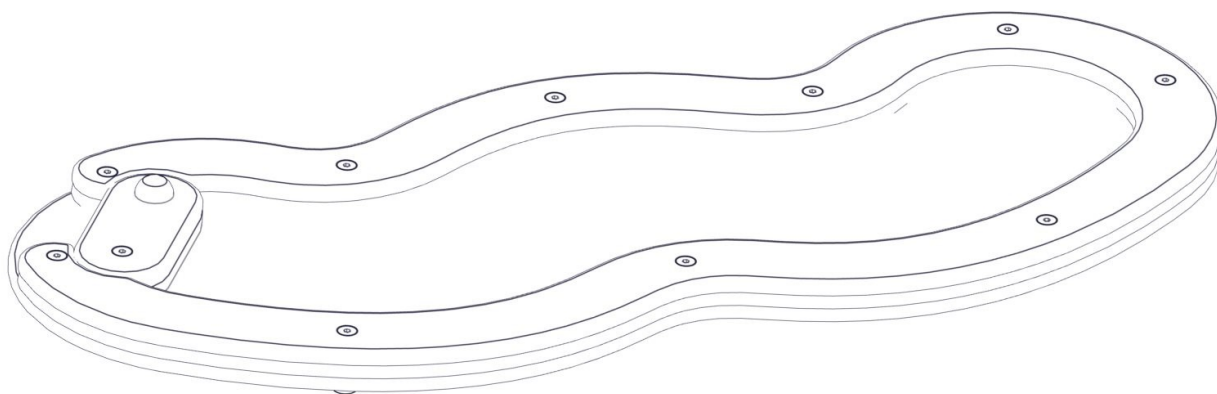
Produkt nr. / Product no. / Produkt nr.

**06-210-228K****Spectrum blue**

Ord. nr. \_\_\_\_\_

Dato. \_\_\_\_\_

Sign. \_\_\_\_\_

**søve**

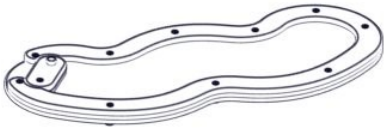
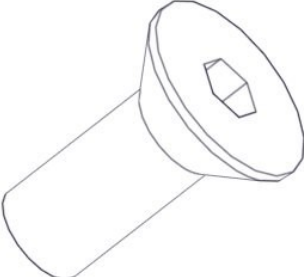
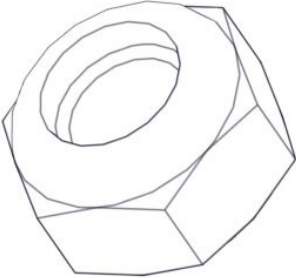


Søve AS  
Grønnvoldveien 290  
3830 Ulefoss - Norway  
Tlf: +47 35 94 65 65  
[www.sove.no](http://www.sove.no)

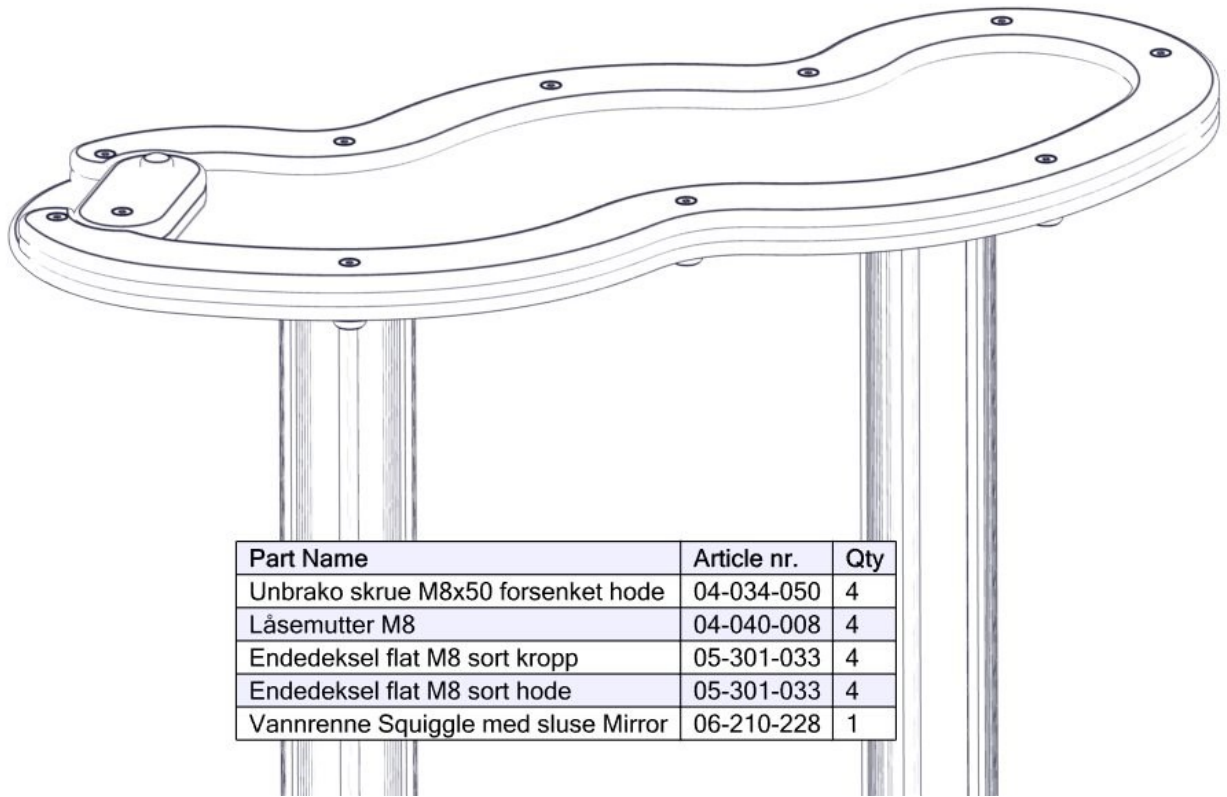
**søve**

Søve AB  
EA Rosengrensgatan 32  
421 31 Västra Frölunda  
Phone: +46 (0)31 773 97 00  
[www.sove.se](http://www.sove.se)

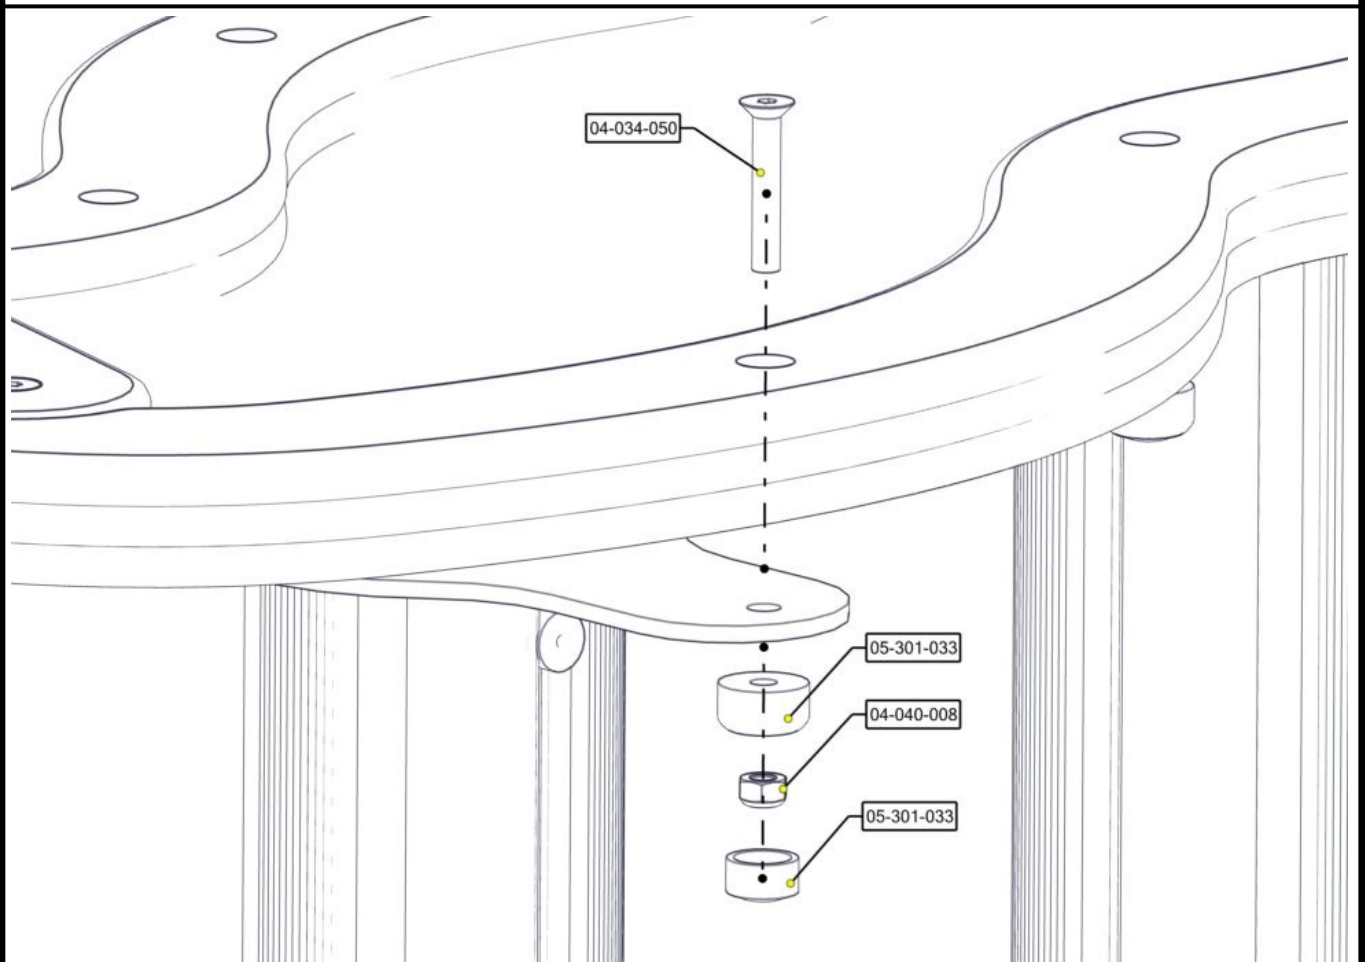
**Boltepakker for / Boltpackage for / Bultpaket för**

Sign. \_\_\_\_\_

Vannrenne Squiggle 06-210-228K	Navn	Artnr/ dimensjon	Ant	Lev
	Vannrenne Squiggle med sluse Mirror Spectrum blue	06-210-228	1	
	Unbrako M8x50 forsenket	04-034-050	4	
	Låsemutter M8	04-040-008	4	
	Endedeksel hode M8	05-301-033	4	
	Endedeksel kropp M8	05-301-033	4	



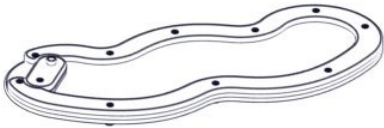
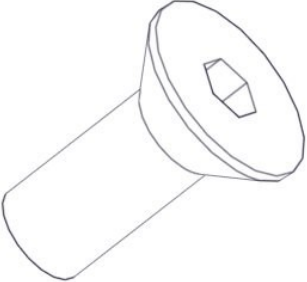
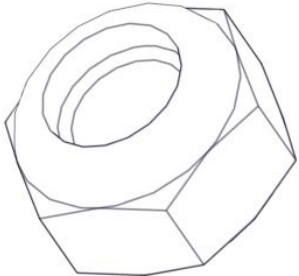


Part Name	Article nr.	Qty
Unbrako skrue M8x50 forsenket hode	04-034-050	4
Låsemutter M8	04-040-008	4
Endedeksel flat M8 sort kropp	05-301-033	4
Endedeksel flat M8 sort hode	05-301-033	4
Vannrenne Squiggle med sluse Mirror	06-210-228	1





**Boltepakker for / Boltpackage for / Bultpaket för**

Sign. \_\_\_\_\_

Vannrenne Squiggle 06-210-228K	Navn	Artnr/ dimensjon	Ant	Lev
	Vannrenne Squiggle med sluse Mirror Spectrum blue	06-210-228	1	
	Unbrako M8x50 forsenket	04-034-050	4	
	Låsemutter M8	04-040-008	4	
	Endedeksel hode M8	05-301-033	4	
	Endedeksel kropp M8	05-301-033	4	