




# Installation guide

## TRAMPOLINE ORTA-I

150 x 200, Code: MA-SA-41-I,  
150 x 250, Code: MA-SA-43-I,  
150 x 300, Code: MA-SA-46-I.

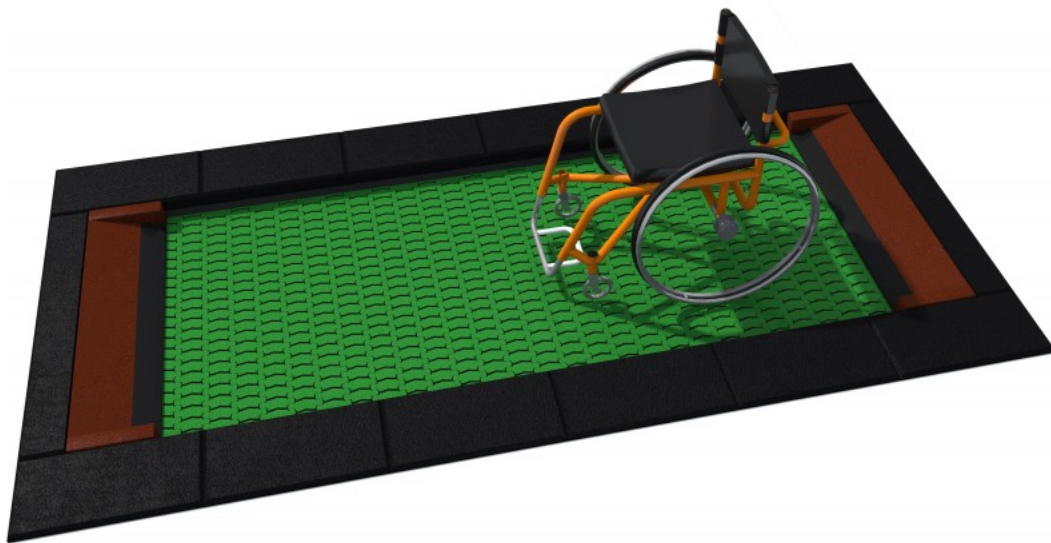

1. The trampoline is delivered as one, already completed unit which is ready for installation.

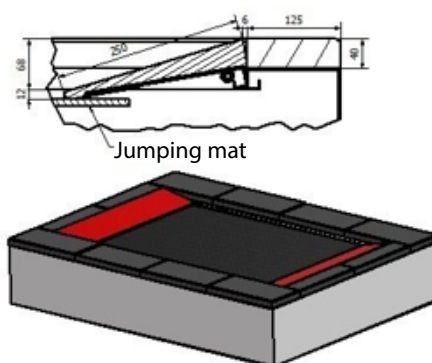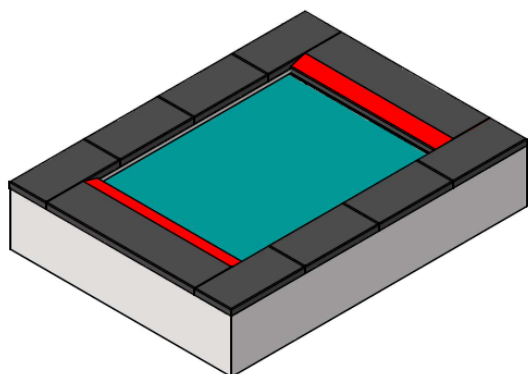

2. The trampoline should be embed in the ground on 40 cm depth – see drawing. The bottom of ground hole should be levelled, stable and water-permeable.

