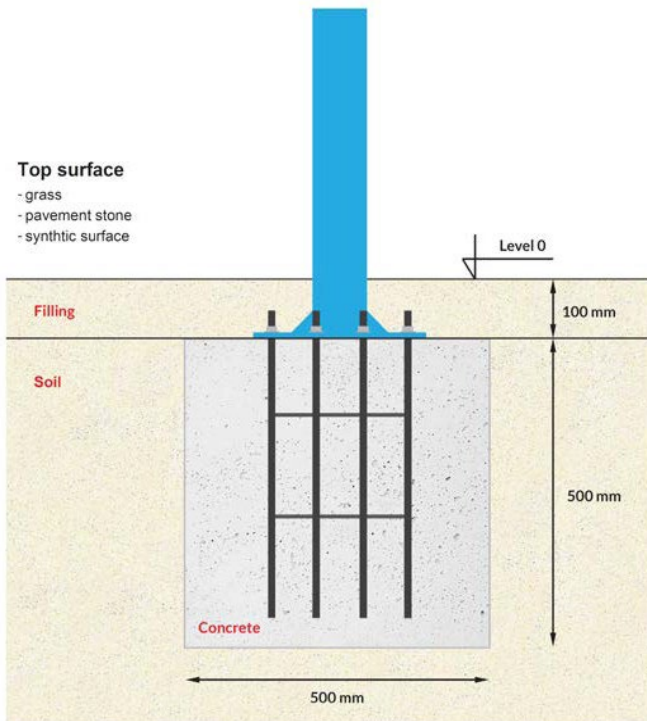
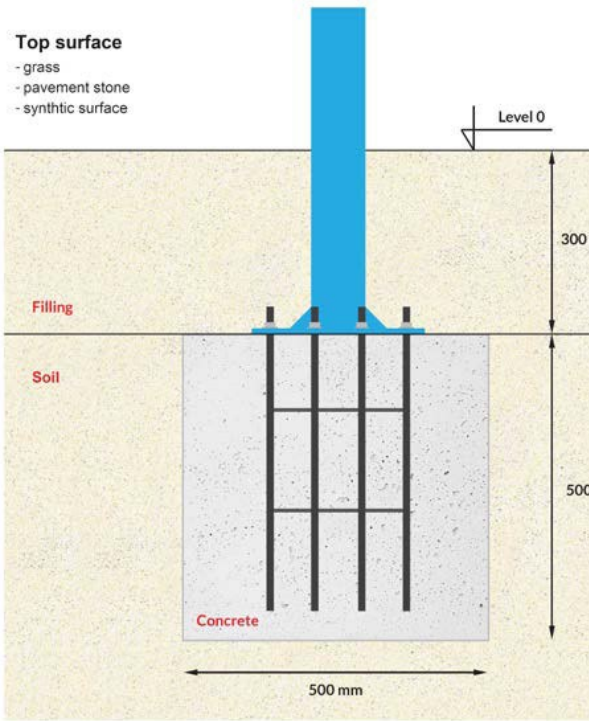
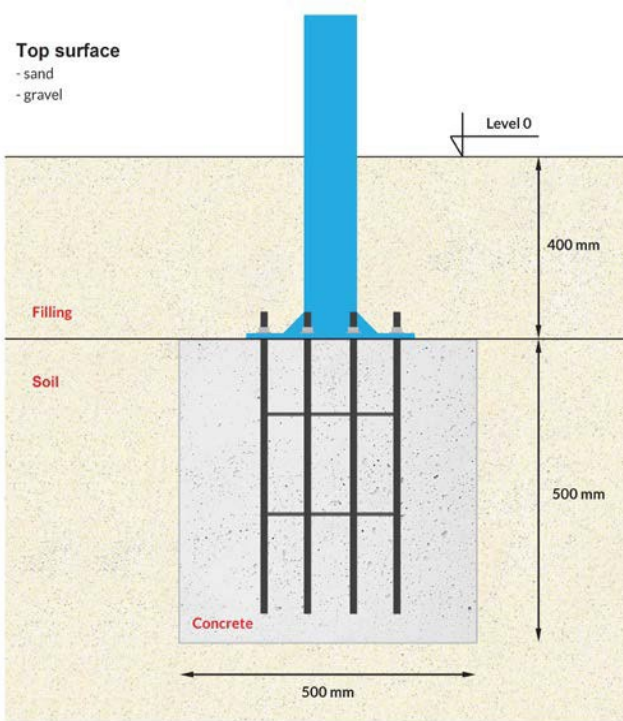


INSTALLATION GUIDE FOR FITNESS DEVICES

Top surface: Grass, Pavement stone, Synthetic surface		Top surface: Sand, Gravel	
<div>KS-FD-003 Bryst trekk + press</div> <div>KS-FD-004 Skulder trekk + press</div> <div>KS-FD-010 Skulder press og bryst press</div> <div>KS-FD-012 Benpress og bryst press</div> <div>KS-FS-001 Orbitrek Ellipseapparat</div> <div>KS-FS-002 Benpress I</div> <div>KS-FS-005 Hesteridning</div> <div>KS-FS-006 Sykkel</div> <div>KS-FS-007 Sykkel 2</div> <div>KS-FS-008 Skiløper</div> <div>KS-FS-012 Skuldertrekk</div> <div>KS-FS-013 Brystpress</div> <div>KS-FS-014 Skulderpress</div> <div>KS-FS-015 Roapparat</div> <div>KS-FS-016 Pendel</div> <div>KS-FS-018 Benk</div> <div>KS-FS-019 Ryggapparat</div> <div>KS-FS-021 Tai-Chi</div>		<div>Only for: RUNNER, DOUBLE RUNNER, TWISTER, TRIPLE TWISTER, PENDULUM+TWISTER, TWISTER+RUNNER+PENDULUM</div> <div>KS-FS-017 Løper</div> <div>KS-FS-028 Twister</div> <div>KS-FD-007 Pendel og twister</div> <div>All devices</div> <div>KS-FX-XXX</div>	
 <p>Top surface - grass - pavement stone - synthetic surface</p> <p>Level 0</p> <p>Filling 100 mm</p> <p>Concrete 500 mm</p> <p>500 mm</p>		 <p>Top surface - grass - pavement stone - synthetic surface</p> <p>Level 0</p> <p>Filling 300 mm</p> <p>Concrete 500 mm</p> <p>500 mm</p>	
		 <p>Top surface - sand - gravel</p> <p>Level 0</p> <p>Filling 400 mm</p> <p>Concrete 500 mm</p> <p>500 mm</p>	

Order of installation:

1. Marking of foundation holes and a safety zone.
2. Dig a foundation hole to the depth appropriate for the device and the surface.
3. Place the steel anchor on the bottom of the hole, level it and verify the depth and position of the depth and position of the top of the anchor.
4. Once the anchor is properly positioned, fill the hole with concrete so that the threaded rods of anchor protrude 40-45 mm above the concrete level. Make sure that the anchor is placed at the right angle and position!
5. After the concrete has hardened, place the device on the threaded rods of the anchors protruding from the foundation. Be careful not to damage them.
6. Prepare the mounting elements.
 - 4 M16 galvanized washers;
 - 4 M16 galvanized nuts;
 - key No. 24.
7. Put a washer and a nut on each thread. Tighten the nuts gently with a wrench.
8. Check that the device is properly seated (vertical, horizontal). Make sure the device is stable. If the unit is not level, align it by adding washers for the threaded rods under the unit. If the device is level, tighten the nuts as much as possible and put on the plastic protective plugs.
9. After tightening the screws, fill the hole with ground (soil).
10. Place the proper surface layer around the device.